

INSTRUCTION MANUAL

 
 
 


DYGER

- VERTICAL CONVERSION GAME.
- PLAYER CAN CONTINUE THE GAME AT ANY TIME.
- 7 THRILLING AND ACTIVE STAGES.


● OVERVIEW

- CRT MONITOR : LANDSCAPESCREEN
- ARRANGING CONTROL PANNEL

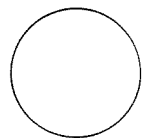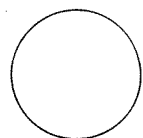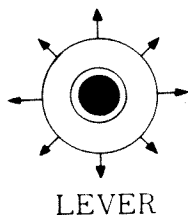

- BUTTON 1GUN SHOT BUTTON
- BUTTON 2BOMB SHOT BUTTON

 ● DIP SW POSITION

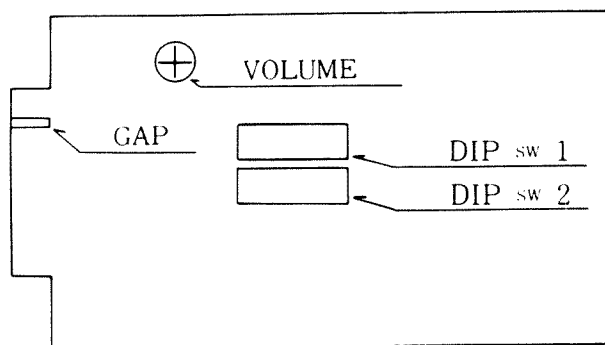

| SOLDERING SIDE | | | COMPONENT SIDE |
|----------------|---|----|------------------|
| GND | A | 1 | GND |
| GND | B | 2 | GND |
| +5V | C | 3 | +5V |
| +5V | D | 4 | +5V |
| N.C. | E | 5 | N.C. |
| +12V | F | 6 | +12V |
| | H | 7 | |
| N. C. | J | 8 | COIN COUNTER 1 |
| N. C. | K | 9 | N. C. |
| SP (-) | L | 10 | SP (+) |
| N.C. | M | 11 | N.C. |
| VIDEO GREEN | N | 12 | VIDEO RED |
| VIDEO SYNC | P | 13 | VIDEO BLUE |
| SERVICE SW | R | 14 | VIDEO GND |
| N. C. | S | 15 | N.C. |
| N. C. | T | 16 | COIN SW 1 |
| N. C. | U | 17 | START SW 1 |
| N. C. | V | 18 | 1P CONTROL UP |
| N. C. | W | 19 | 1P CONTROL DOWN |
| N. C. | X | 20 | 1P CONTROL LEFT |
| N. C. | Y | 21 | 1P CONTROL RIGHT |
| N. C. | Z | 22 | 1P CONTROL PUSH1 |
| N. C. | a | 23 | 1P CONTROL PUSH2 |
| N. C. | b | 24 | N. C. |
| N. C. | c | 25 | N. C. |
| N. C. | d | 26 | N. C. |
| GND | e | 27 | GND |
| GND | f | 28 | GND |

● CONNECTOR TYPE

CR7-56DA-3.96 : HIROSE
1168-056-009 : KEL

