

**TAITO**

**Silent**

**Dragon**

**SPECIFICATIONS**



**TAITO AMERICA CORPORATION      390 HOLBROOK DRIVE**  
**WHEELING, ILLINOIS 60090**  
**PHONE: (708) 520-9280      FAX: (708) 520-1309**

# SILENT DRAGON

## OPTION DIP-SWITCH SETTINGS

DIP SWITCH A		SWITCH POSITIONS							
FUNCTIONS	SETTINGS	1	2	3	4	5	6	7	8
NOT USED		OFF							
SCREEN POSITION	NORMAL		OFF						
	REVERSE		ON						
TEST MODE	NORMAL GAME			OFF					
	TEST MODE			ON					
ATTRACT SOUNDS	WITH				OFF				
	WITHOUT				ON				
PLAY PRICING	1 COIN = 1 PLAY					OFF	OFF		
	2 COINS = 1 PLAY					ON	OFF		
	3 COINS = 1 PLAY					OFF	ON		
	4 COINS = 1 PLAY					ON	ON		
BUY-IN PRICING	<b>SAME AS PLAY PRICING</b>							OFF	OFF
	1 COIN = CONTINUE							ON	OFF
	2 COINS = CONTINUE							OFF	ON
	3 COINS = CONTINUE							ON	ON

DIP SWITCH B		SWITCH POSITIONS							
FUNCTIONS	SETTINGS	1	2	3	4	5	6	7	8
DIFFICULTY LEVELS	AVERAGE	OFF	OFF						
	EASY	ON	OFF						
	DIFFICULT	OFF	ON						
	VERY DIFFICULT	ON	ON						
INVINCIBLE PLAYER MODE	WITHOUT			OFF					
	WITH			ON					
POWER-UP AT STAGE CLEAR	WITH				OFF				
	WITHOUT				ON				
REGAIN POWER	WITH					OFF			
	WITHOUT					ON			
COIN DOOR CONFIGURATION	1 COIN SLOT (SHARED)						OFF		
	4 COIN SLOT (1 PER PLAYER)						ON		
CABINET STYLE	3 PLAYERS							OFF	OFF
	2 PLAYERS							ON	OFF
	4 PLAYERS							OFF	ON
	4 PLAYERS (2 CABINETS W/LINK-UP)							ON	ON

BOLD TYPE INDICATES FACTORY RECOMMENDED SETTINGS.

# SILENT DRAGON

## JAMMA HARNESS CONNECTION CHART

SOLDER SIDE				COMPONENT SIDE	
FUNCTION	COLOR	EDGE CONNECTOR		COLOR	FUNCTION
GROUND	BLK	A	1	BLK	GROUND
GROUND	BLK	B	2	BLK	GROUND
+5VDC	RED	C	3	RED	+5VDC
+5VDC	RED	D	4	RED	+5VDC
-5VDC	BRN	E	5	BRN	-5VDC
+12VDC	BLU	F	6	BLU	+23VDC
KEY		H	7	KEY	
COIN METER B	WHT/VIO	J	8	BLU/BRN	COIN METER A
COIN LOCKOUT B		K	9		
SPEAKER (-)	BLK	L	10	WHT/BLK	SPEAKER (+)
		M	11		
VIDEO GREEN	GRN	N	12	RED	VIDEO RED
VIDEO SYNC	WHT	P	13	BLU	VIDEO BLUE
SERVICE SW	BRN/WHT	R	14	BLK	VIDEO GROUND
SLAM SW	WHT/BRN	S	15		
COIN B	GRN/YEL	T	16	WHT/YEL	COIN A
2PL SELECT	RED/BLK	U	17	PNK/BLK	1PL SELECT
2PL UP	BRN/BLU	V	18	ORN/BLU	1PL UP
2PL DOWN	ORN/WHT	W	19	GRN/ORN	1PL DOWN
2PL LEFT	ORN/GRN	X	20	GRN/BLU	1PL LEFT
2PL RIGHT	WHT/ORN	Y	21	RED/YEL	1PL RIGHT
2PL ATTACK	BRN/BLK	Z	22	RED/WHT	1PL ATTACK
2PL JUMP	YEL/WHT	a	23	WHT/RED	1PL JUMP
2PL SPECIAL	BRN/GRN	b	24	YEL/BLK	1PL SPECIAL
		c	25		
		d	26		
GROUND	BLK	e	27	BLK	GROUND
GROUND	BLK	f	28	BLK	GROUND

# SILENT DRAGON


## 3RD AND 4TH PLAYER CONNECTION CHART

3RD PLAYER CONNECT	
PIN	FUNCTION
1	COIN 3
2	3P SELECT
3	3P LEFT
4	3P RIGHT
5	3P UP
6	3P DOWN
7	3P ATTACK
8	3P JUMP
9	3P TRICK
10	
11	SERVICE
12	COIN METER 3
13	LOCKOUT 3
14	GROUND
15	GROUND

4TH PLAYER CONNECT	
PIN	FUNCTION
1	COIN 3
2	4P SELECT
3	4P LEFT
4	4P RIGHT
5	4P UP
6	4P DOWN
7	4P ATTACK
8	4P JUMP
9	4P TRICK
10	
11	
12	COIN METER 4
13	LOCKOUT 4
14	GROUND
15	GROUND

2ND MONITOR CONN. *	
PIN	FUNCTION
1	VIDEO RED
2	VIDEO GREEN
3	VIDEO BLUE
4	VIDEO SYNC
5	VIDEO GROUND

2ND SPEAKER CONN. *	
PIN	FUNCTION
1	SPEAKER (+)
2	SPEAKER (-)
3	

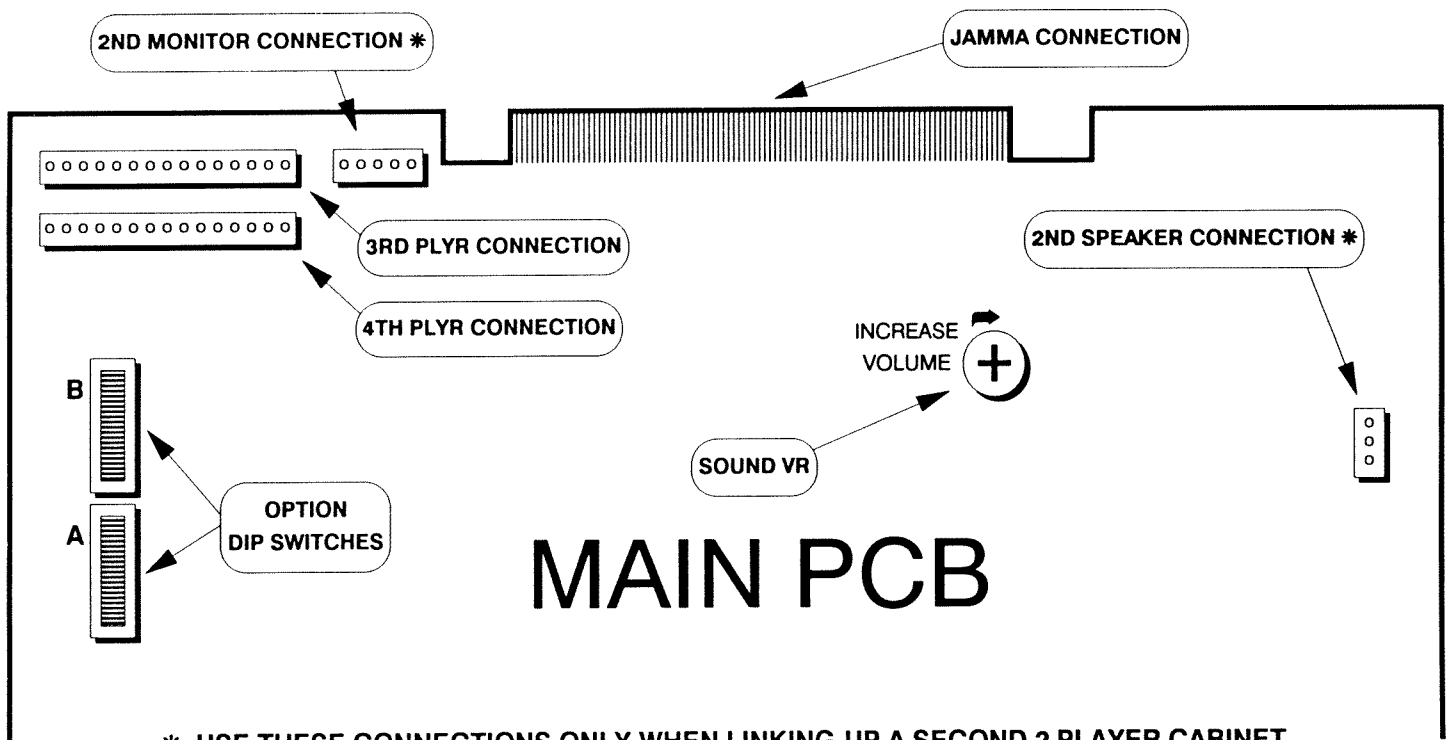

\* USE THESE CONNECTIONS ONLY WHEN LINKING-UP A SECOND 2 PLAYER CABINET.

# SILENT DRAGON

## 《OVERSEA VERSION》

### 【SETTING OF DIP SWITCH A】

		1	2	3	4	5	6	7	8	
NOT USED		OFF								
SCREEN ROTATION	NORMAL		OFF							
	REVERSE		ON							
TEST MODE	NORMAL			OFF						
	TEST			ON						
ATTRACT SOUND	WITH				OFF					
	WITHOUT				ON					
PLAY PRICING ( COIN A COIN B ) ( COIN C COIN D )	1COIN 1PLAY					OFF	OFF			
	2COIN 1PLAY					ON	OFF			
	3COIN 1PLAY					OFF	ON			
	4COIN 1PLAY					ON	ON			
NOT USED								OFF		
									OFF	

### 【SETTING OF DIP SWITCH B】

		1	2	3	4	5	6	7	8
GAME DIFFICULTY	NORMAL	OFF	OFF						
	EASY	ON	OFF						
	HARD	OFF	ON						
	EXTRA HARD	ON	ON						
HIT OF PLAYERS	WITHOUT			OFF					
	WITH			ON					
CLEAR STAGE POWER UP	WITH				OFF				
	WITHOUT				ON				
REGAIN POWER	WITH					OFF			
	WITHOUT					ON			
SHOOTER	1SHOOTER						OFF		
	4SHOOTER						ON		
SETTING SELECT	3PLAY							OFF	OFF
	2PLAY							ON	OFF
	4PLAY							OFF	ON
	4PLAY (2P 2P)							ON	ON

ATTENTION) It must be main power "OFF" if you operate dip switches.

# CONNECTING DIAGRAM

### 3P CONNECTER

1	COIN 3
2	3P SELECT
3	3P LEFT
4	3P RIGHT
5	3P UP
6	3P DOWN
7	3P ATTACK BUTTON
8	3P JUMP BUTTON
9	2P SPECIAL ATTACK
10	
11	SERVICE
12	COIN METER 3
13	LOCKOUT 3
14	GND
15	GND

### 4P CONNECTER

1	COIN 4
2	4P SELECT
3	4P LEFT
4	4P RIGHT
5	4P UP
6	4P DOWN
7	4P ATTACK BUTTON
8	4P JUMP BUTTON
9	4P SPECIAL ATTACK
10	
11	
12	COIN METER 4
13	LOCKOUT 4
14	GND
15	GND

### G CONNECTER (JAMMA)

SOLDER-SIDE			PARTS-SIDE	
GND	A	1	GND	
GND	B	2	GND	
+5V	C	3	+5V	
+5V	D	4	+5V	
-5V	E	5	-5V	
+12V	F	6	+12V	
POST	H	7	POST	
COIN METER 2	J	8	COIN METER 1	
COIN LOCKOUT 2	K	9	COIN LOCKOUT 1	
SPEAKER (-)	L	10	SPEAKER (+)	
SOUND GND	M	11	SOUND	
VIDEO G	N	12	VIDEO R	
VIDEO SYNC	P	13	VIDEO B	
SERVICE SW	R	14	VIDEO GND	
TILT SW	S	15		
COIN 2	T	16	COIN 1	
2P SELECT	U	17	1P SELECT	
2P UP	V	18	1P UP	
2P DOWN	W	19	1P DOWN	
2P LEFT	X	20	1P LEFT	
2P RIGHT	Y	21	1P RIGHT	
2P ATTACK BUTTON	Z	22	1P ATTACK BUTTON	
2P JUMP BUTTON	a	23	1P JUMP BUTTON	
2P SPECIAL ATTACK	b	24	1P SPECIAL ATTACK	
	c	25		
	d	26		
GND	e	27	GND	
GND	f	28	GND	

### M CONNECTER

1	VIDEO-RED
2	VIDEO-GREEN
3	VIDEO-BLUE
4	VIDEO-SYNC
5	VIDEO-GND

### S CONNECTER

1	SOUND (+)
2	SOUND (-)
3	

