


ADJUSTMENTS ON GAME P.C. BOARD

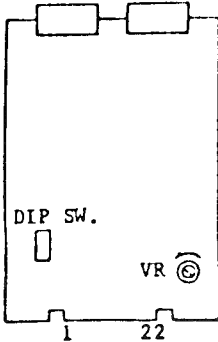

H-CONNECTOR

1	GND
2	GND
3	GND
4	GND
5	+5V
6	+5V
7	+5V
8	
9	
10	(POST)
11	+12V
12	+12V

G-CONNECTOR

	A	1	
VIDEO GND	B	2	VIDEO RED
VIDEO BLUE	C	3	VIDEO GREEN
	D	4	VIDEO SYNC
SOUND CHD	E	5	SOUND OUT
(POST)	F	6	(POST)
	H	7	
	J	8	COIN
	K	9	
	L	10	
	M	11	
SELECT-2	N	12	SELECT-1
2P UP	P	13	1P UP
2P DOWN	R	14	1P DOWN
2P RIGHT	S	15	1P RIGHT
2P LEFT	T	16	1P LEFT
	U	17	
	V	18	
	W	19	
	X	20	
2P SHOOT	Y	21	1P SHOOT
	Z	22	

VR...POT FOR ADJUSTING TOTAL
SOUNDS.
TO INCREASE THE TOTAL
SOUNDS, TURN THE POT TO
THE DIRECTION AS SHOWN
BY ARROWHEAD.

SOLDER SIDE

COMPONENTS
SIDE

SETTING OF DIP SW.

*AT EX-FACTORY

SETTING		POSITION	1	2	3	4	5	6	7	8
PLAY PRICING	* 2 COINS 1 CREDIT		OFF	OFF	OFF					
	* 1 COIN 1 CREDIT		ON	OFF	OFF					
	* 1 COIN 2 CREDITS		OFF	ON	OFF					
	* 1 COIN 3 CREDITS		ON	ON	OFF					
	* 1 COIN 4 CREDITS		OFF	OFF	ON					
	* 1 COIN 5 CREDITS		ON	OFF	ON					
	* 1 COIN 6 CREDITS		OFF	ON	ON					
	* 1 COIN 7 CREDITS		ON	ON	ON					
TIMER SPEED	* 70% (FAST)					OFF	OFF			
	80%					ON	OFF			
	90%					OFF	ON			
	100% (SLOW)					ON	ON			
BONUS POINTS	* 200,000 PTS.							OFF		
	400,000 PTS.							ON		
GAME STYLE	UPRIGHT								OFF	
	TABLE								ON	
TEST MODE	* HIT									OFF
	NO HIT									ON