ADJUSTMENT OF GAME PC BOARD (LIQUID KIDS G25 00620)

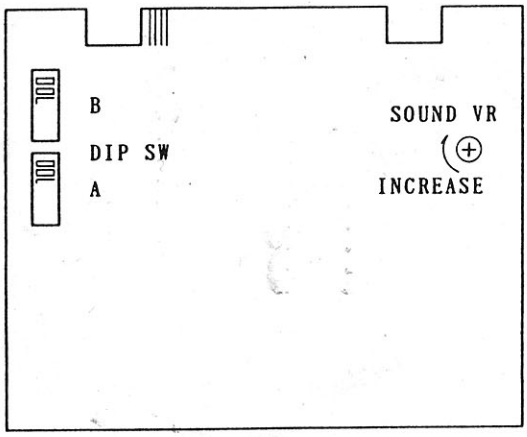

☆ CONTROL OF THIS GAME USES ONE 2-WAY JOYSTICK AND 2 BUTTONS.

G-CONNECTOR (JAMMA)

SOLDER SIDE		COMPONENTS SIDE	
GND	A	1	GND
GND	B	2	GND
+5V	C	3	+5V
+5V	D	4	+5V
-5V	E	5	-5V
+12V	F	6	+12V
POST	H	7	POST
COIN METER B	J	8	COIN METER A
COIN LOCKOUT B	K	9	COIN LOCKOUT A
SPEAKER (-)	L	10	SPEAKER (+)
SOUND GND	M	11	SOUND
VIDEO G	N	12	VIDEO R
VIDEO SYNC	P	13	VIDEO B
SERVICE SW	R	14	VIDEO GND
TILT SW	S	15	
(COIN B)	T	16	COIN A
2P SELECT	U	17	1P SELECT
	V	18	
	W	19	
2P LEFT	X	20	1P LEFT
2P RIGHT	Y	21	1P RIGHT
2P ATTACK BUTTON	Z	22	1P ATTACK BUTTON
2P JUMP BUTTON	a	23	1P JUMP BUTTON
	b	24	
	c	25	
	d	26	
GND	e	27	GND
GND	f	28	GND

NOTE) BEFORE CHANGING THE SETTING OF THE DIP SWITCH, TURN THE POWER OFF.

◇ SETTING OF DIP SWITCH A

(*): FACTORY SETTING

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
PLAY STILE	TABLE	OFF							
	* UPIGHT	ON							
SCREEN ROTATION	* NORMAL		OFF						
	REVERSE		ON						
TEST MODE	* NORMAL GAME			OFF					
	TEST MODE			ON					
ATTRACT SOUND	* WITH				OFF				
	WITHOUT				ON				
PLAY PRICING COIN A	* 1 COIN 1 PLAY					OFF	OFF		
	2 COINS 1 PLAY					ON			
	3 COINS 1 PLAY					OFF	ON		
	4 COINS 1 PLAY					ON			
PLAY PRICING COIN B	* 1 COIN 2 PLAYS							OFF	OFF
	1 COIN 3 PLAYS							ON	
	1 COIN 4 PLAYS							OFF	ON
	1 COIN 6 PLAYS							ON	

◇ SETTING OF DIP SWITCH B

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY(A) → DIFFICULT(D)	* RANK B	OFF	OFF						
	RANK A	ON							
	RANK C	OFF	ON						
	RANK D	ON							
BONUS POINTS 1 UP (K=1.000 PTS.)	* 30K,100K,200K,300K PTS.EVERY			OFF	OFF				
	30K,150K,300K,450K PTS.EVERY			ON					
	50K,250K,500K,750K PTS.EVERY			OFF	ON				
	50K,350K,700K,1050K PTS.EVERY			ON					
NUMBER OF PLAYERS	* 3					OFF	OFF		
	2					ON			
	5					OFF	ON		
	4					ON			
CONTINUE	* WITH							OFF	
	WIHTOUT							ON	
GAME TYPE	* WHEN DIP SW A-1 IS SET TO "OFF": WITH SCREEN INVERSION, 2-P PLAY. WHEN DIP SW A-1 IS SET TO "ON": WITHOUT SCREEN INVERSION, SINGLE CONTROL PANEL. 2-P PLAY.								OFF
	WHEN DIP SW A-1 IS SET TO "OFF": WITH SCREEN INVERSION, 2-P PLAY. WHEN DIP SW A-1 IS SET TO "ON": WITHOUT SCREEN INVERSION, W-CONTROL PANEL .2-P PLAY.								ON