

DEATH RACE

**EXIDY
SERVICE
MANUAL**



TABLE OF CONTENTS

	PAGE NO.
I. GENERAL INFORMATION	1
II. OBJECT OF THE GAME	1
III. NORMAL OPERATION	1
IV. SYSTEM FUNCTIONAL DESCRIPTION	2
Power Supply	
Logic Printed Circuit Board (PCB)	
Coin Mechanism	
Start Switch	
Steering Units	
Pedal Units	
Speakers	
T.V. Monitor	
Shift Lever	
V. TROUBLESHOOTING TIPS	2
Picture not present	
Entire picture scrambled	
Picture present but partially bad or characters act incorrectly	3
Bad Steering	
No shift	
No acceleration or bad acceleration	
No game start/sound present	
No game start/sound not present	
Game starts/no sound	
VI. ADJUSTMENTS	
Power Supply Adjustment	4
Volume Adjustment	
Tone Adjustment	
Game Time Adjustments	
VII. FIGURES	
Figure 1 — Main Cabinet (Exploded View)	6-7
Figure 2 — Steering Box and Display (Exploded View)	8-9
Figure 3 — Foot Pedal Assembly (Rear View)	11
Figure 4 — Power Supply	13
Figure 5 — Optical (Steering) Board	15
Figure 6 — Logic Printed Circuit Board (PCB)	16
Figure 7 — System Block Diagram	19
Figure 8 — Wiring Diagram	20-21
Figure 9 — Acceleration (Foot Pedal) Wiring	23
Figure 10 — Optical Steering Board Schematic	
Figure 11 — Steering Mech. Detail (Exploded View)	

DEATH RACE

I. GENERAL INFORMATION

Death Race pits the player against an intelligent acting, evasive, running Gremlin. Unlike most "player versus machine" games, the "machine" in this case does not simply repeat an action or sequence, but actually "sees", "thinks", and "acts" as intelligently (and even more rapidly) than would another player. The result of this is that each game is a new and different experience.

II. OBJECT OF THE GAME

The object of the game is simple. Hit a Gremlin and you win a point.

There are two Gremlins running around the playing field in a random fashion. They are intelligent robots in every sense and will avoid all objects so long as they can see a way to escape.

You drive one of two cars which are completely under your control. You can steer them anywhere in any direction within the playing field; move forward in low or high gear; and move in reverse when necessary. You can drive as fast, but no faster than the Gremlins can run.

When you hit a Gremlin a tombstone (cross) will appear and remain in that same spot until the game is over and a new game begun. Wherever you hit a Gremlin on the playing field, the cross will remain. Thus, each game creates its own totally random and different maze of crosses that each player must steer through while chasing the Gremlins. The more hits, the more crosses; the more crosses, the harder the steering becomes. Thus, it becomes increasingly difficult to maneuver as your skill increases.

III. NORMAL OPERATION

The screen is divided horizontally into three (3) areas: the larger being in the middle between the dotted lines. This represents the legitimate playing field. It is only in this area that hits can occur; and any car that attempts to leave this area will crash when it contacts the top, bottom, or (dotted) side lines. There is no point given or cross created for this type of crash.

Although the cars will crash when trying to cross the dotted line toward the solid sideline, the Gremlins can and do pass through without crashing.

The areas on the sides between the solid and dotted lines are a designated "safe" area for the Gremlins. They will enter this area at will.

When you crash your car into anything, whether it be a Gremlin, cross, or a boundary (line), your car will pause briefly before moving again, unless you immediately shift into reverse to back away from the scene of the crash. Even if you do not back away, your car will begin to move again. It is thus possible to crash into and pass through, after a pause, any boundary. Although by this method you can leave the playing field and pass into the safe zone or other "out of bounds" areas, you cannot intercept and hit a Gremlin nor receive a point outside the playing field.

Once outside the playing field, you may drive your car off the visible screen and it will reappear on the opposite side of the screen. The Gremlins can do this also but should only do so if the safe zone area is blocked and there is no place for them to enter the playing field. In this case, they will normally run off the screen to the side and reappear on the opposite side. A Gremlin should never pass through the top or bottom boundaries.

Should one player crash into the other player, both cars will pause briefly before proceeding. Because of this, it is sometimes advantageous to crash into your opponent's car in order to slow down and prevent your opponent from hitting a Gremlin and scoring. There is no score from crashing into your opponent's driven car.

When one coin is inserted the sound for player one is enabled. When a second coin is inserted, the sound for player two is enabled. When the start button is depressed the game begins, the players can drive their cars and the game counter counts down from 99 toward 00. The duration of the game is adjustable in three (3) increments from one (1) minute twenty (20) seconds, to two (2) minutes fifteen (15) seconds. See "ADJUSTMENTS" for information regarding game time.

Each car has two forward speeds. When the pedal is not depressed, the car will not move, but will turn on its axis as the steering wheel is turned. Slight depressing moves the car forward in low gear, and full depression moves the car forward in high gear. If the shift lever is in reverse, the car will move backwards at a low gear speed. There is no high gear in reverse.

IV. SYSTEM FUNCTIONAL DESCRIPTION (Refer to System Block Diagram, Fig. 7)

115 VAC power is applied through interlock switch S1 (back door panel) to the power supply, the T.V. monitor, and the light fixtures.

The Power Supply converts this to +5VDC and 22 VAC. The +5VDC is used to power the LOGIC PCB (printed circuit board), Coin Counter, both steering units (optical boards), and both foot pedal units (2 microswitches each), the 22 VAC is used to power the audio (sound circuitry located on the LOGIC PCB).

The Logic PCB generates all video (T.V. picture), audio (sound), and is the nerve center for all control functions.

The Coin Mechanism signals the Logic PCB that a one (1) or two (2) player game can now begin, pending the pressing of the start switch. It also simultaneously signals the coin counter to advance one (1) count for each coin.

The Start Switch, when depressed, signals the logic PCB that a game can now begin.

The Steering Units for player 1 and player 2 are identical, and each consists of a steering wheel, a shift lever, and an optical control board. The optical control board converts the rotation of the steering wheel and the two (2) positions of the shift lever (forward & reverse) into commands which are routed to the Logic PCB, which then interprets and executes these commands, causing the driven cars on screen to react accordingly.

The Pedal Units for player 1 and player 2 are identical and each consists of a spring loaded foot pedal and two (2) microswitches. The pedal, when in the "off" position (not depressed) trips the top microswitch and does not trip the bottom switch. Depressing the pedal down slightly allows both the top and bottom microswitch to be in an "untripped" state, which tells the Logic PCB that the corresponding player is now in low gear. Further depression of the pedal trips the bottom microswitch, telling the Logic PCB that the corresponding player is now in high gear. The image on screen will then react accordingly.

The Speakers, which are located in the steering module, receive their signal directly from the Logic PCB; and are not activated until the coin mechanism has been tripped by a coin. They will remain active only while a game is in progress. When the game ends, so does the sound.

The Shift Lever is part of the steering units, and its signal is developed by the same optical control board as is the steering (see steering units).

V. TROUBLESHOOTING TIPS

NOTE

The single most important factor in the proper operation of your Death Race game is the power supply voltage adjustment. Before any troubleshooting can be done the power supply voltage must be checked, and adjusted if necessary. See "POWER SUPPLY ADJUSTMENT."

PICTURE NOT PRESENT

Check:

1. 115 VAC system power
2. +5VDC power supply
3. All harnesses connected
4. T.V. brightness control

ENTIRE PICTURE SCRAMBLED

Check:

1. T.V. horizontal hold control
2. T.V. vertical hold control
3. +5VDC power supply adjusted

PICTURE PRESENT BUT PARTIALLY BAD, OR CHARACTERS ACT INCORRECTLY.

Check:

1. +5VDC power supply adjusted
2. Nothing external touching Logic PCB
3. Harnesses all tightly connected

NO STEERING OR BAD STEERING:

Check:

1. Light bulbs on optical control boards
2. +5VDC power supply
3. Optical board harness connected
4. Light bulbs on optical control boards aligned properly (See Fig. 5)

NOTE

If only one player has bad steering the optical board can be tested by plugging the player 1 connector to the player 2 optical board (and vice versa). If this method is used be extremely careful to insure the connector is not plugged in backward. Plugging the connector in backward will destroy the optical board.

NO SHIFT

Check:

All checks are the same as those listed under "NO STEERING OR BAD STEERING" above.

NO ACCELERATION OR BAD ACCELERATION

Check:

1. Foot pedals free to operate
2. Micro switches on foot pedals
3. Foot pedal harness connected
4. +5VDC power supply

NOTE

If only one player has bad acceleration the foot pedal harnesses can be reversed for checkout of microswitches if necessary, as outlined for steering problems under "NO STEERING OR BAD STEERING" above.

NO GAME START/SOUND PRESENT

Check:

1. Start switch
2. +5VDC power supply
3. Start switch harness connected

NO GAME START/SOUND NOT PRESENT

Check:

1. Coin Mechanism — NOTE: Coin mechanism functions okay if drop of coin causes cars to reset to start position at bottom of screen, facing upwards.
2. +5VDC power supply
3. Harnesses connected

GAME STARTS/NO SOUND

Check:

1. 22 VAC from power supply
2. Speaker harnesses connected

Any problems which cannot be localized to other units probably indicate a bad LOGIC PCB, since it is the heart of the system. If another is available it should be temporarily placed in the bad game to see if the problem remains.

VI. ADJUSTMENTS

POWER SUPPLY ADJUSTMENT

1. Contact voltmeter leads to Logic PCB as indicated in Fig. 6.
2. Adjust potentiometer R8 (see fig. 4) on power supply for +5.0 VDC as measured on the LOGIC PCB per above diagram. The positive (+) lead of the voltmeter must be touching the large metal area (trace) on the non-component side of the Logic PCB which is connected to pins 2 and 5 of the 6 pin connector. The negative (-) lead of the voltmeter must be touching the large metal area (trace) on the component side of the LOGIC PCB, which is connected to pins 1 and 6 of the 6 pin connector.

NOTE

This voltage measurement must be made at the LOGIC PCB, since voltage losses may occur between the power supply and the Logic PCB. Adjustment of the power supply voltage made while measuring the voltage directly on the power supply terminals will not necessarily insure proper voltage to be present on the Logic PCB.

VOLUME ADJUSTMENTS (Refer to fig. 6)

Volume controls are located on the Logic PCB and are as follows:

- | | |
|---------------------|------|
| 1. Player one motor | R50 |
| 2. Player two motor | R66 |
| 3. Crash | R80 |
| 4. Scream | R782 |

TONE ADJUSTMENTS (Refer to Fig. 6)

Tone controls are located on the Logic PCB and are as follows:

- | | |
|---------------|-----|
| 1. Player one | R7 |
| 2. Player two | R14 |

SCREAM MODULATION

R778
R780

GAME TIME ADJUSTMENTS (Refer to Fig. 6)

A movable jumper wire, located on the LOGIC PCB, allows adjustment of the length of game time. The counter will always begin at 99 and begin to count down to 00 when the START button is depressed after a coin is inserted. The rate at which the counter counts down will vary depending on the location of the jumper wire. Three options are available for a short, medium and long game time. These are selected by placing the jumper wire on the appropriate terminal post. The post nomenclature and approximate times are listed below:

Post 1 = 1 minute 20 seconds
Unmarked Post = 1 minute 45 seconds
Post 2 = 2 minutes 15 seconds

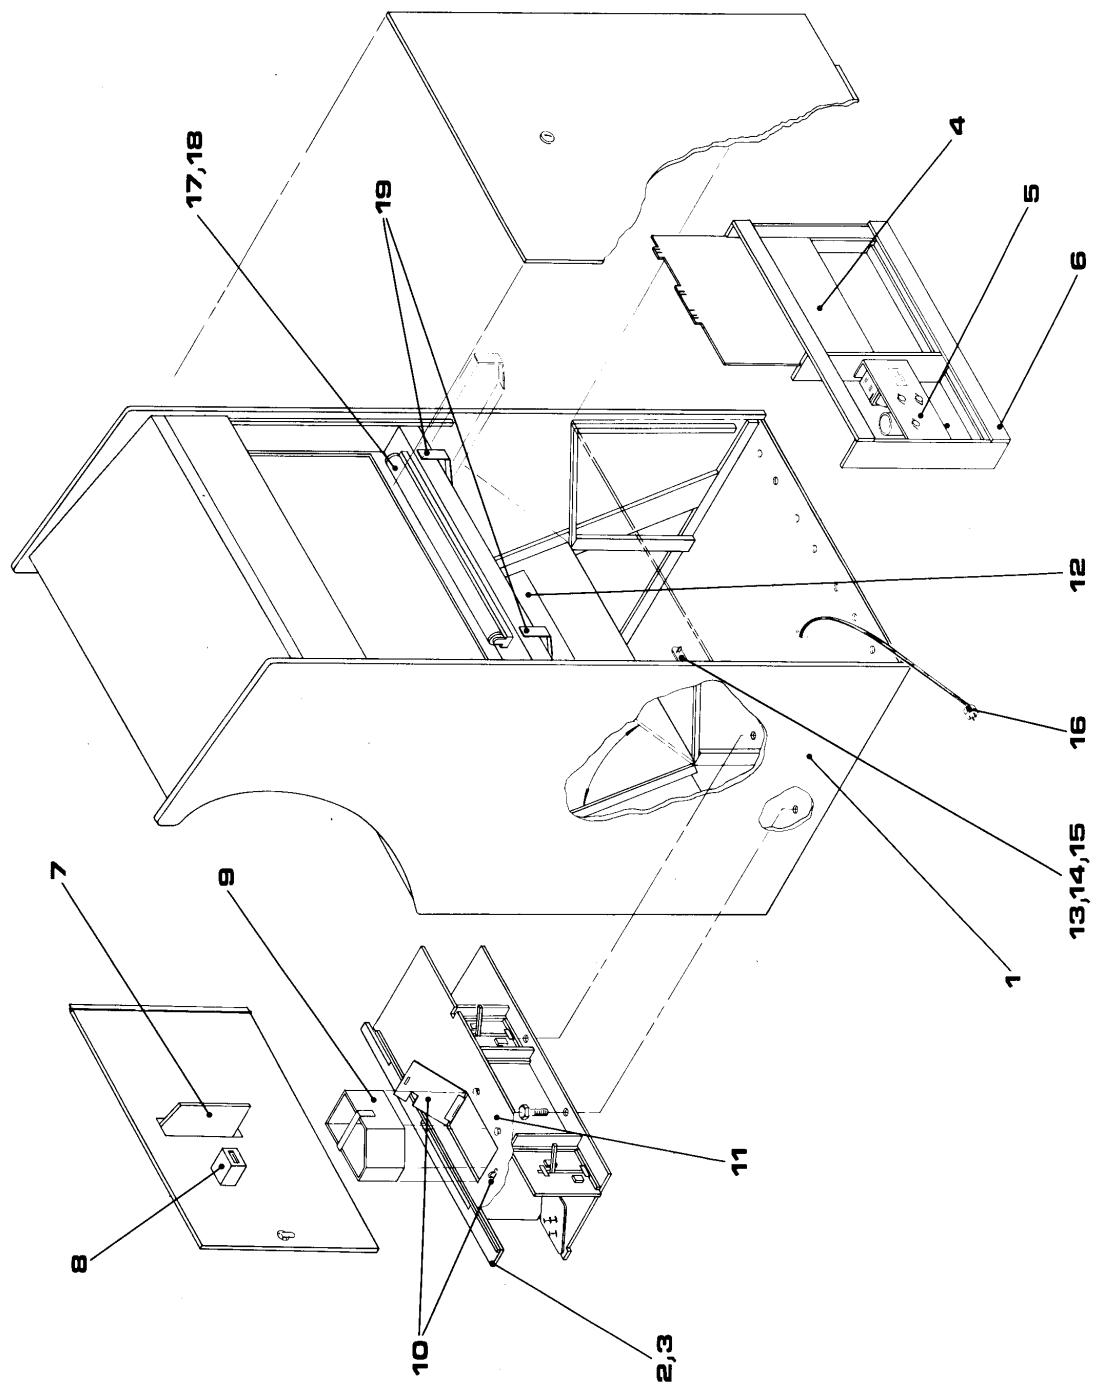


FIG 1
MAIN CABINET

EXIDY		
ITEM	PART NO.	DESCRIPTION
1.	DR-UP-CAB	Cabinet
2.	DR-FP-BOX-COMPLETE	Foot pedal box comp
3.	DR-FP-BOX-EMPTY	Foot pedal box empty
4.	DR-PCB-2	Game printed circuit board
5.	EAPS-5-10	Power supply
6.	DR-PCB-PS-B	& P.C.B. box
7.	2608-300	Coin mech
8.	E607	Coin counter
9.	DR-CB	Coin bucket
10.	DR-CBLH	Coin box lid & hasp
11.	DR-FP-C	Foot pedal box cover
12.	XM701-10	Monitor
13.	E64-30A	Interlock switch
14.		Fuse holder
15.		Fuse
16.	17412	AC cord
17.	F20T12CW	Fluorescent bulb
18.	S120TS	Fluorescent fixture
19.	DR-MON-BRK7	Monitor brkt.

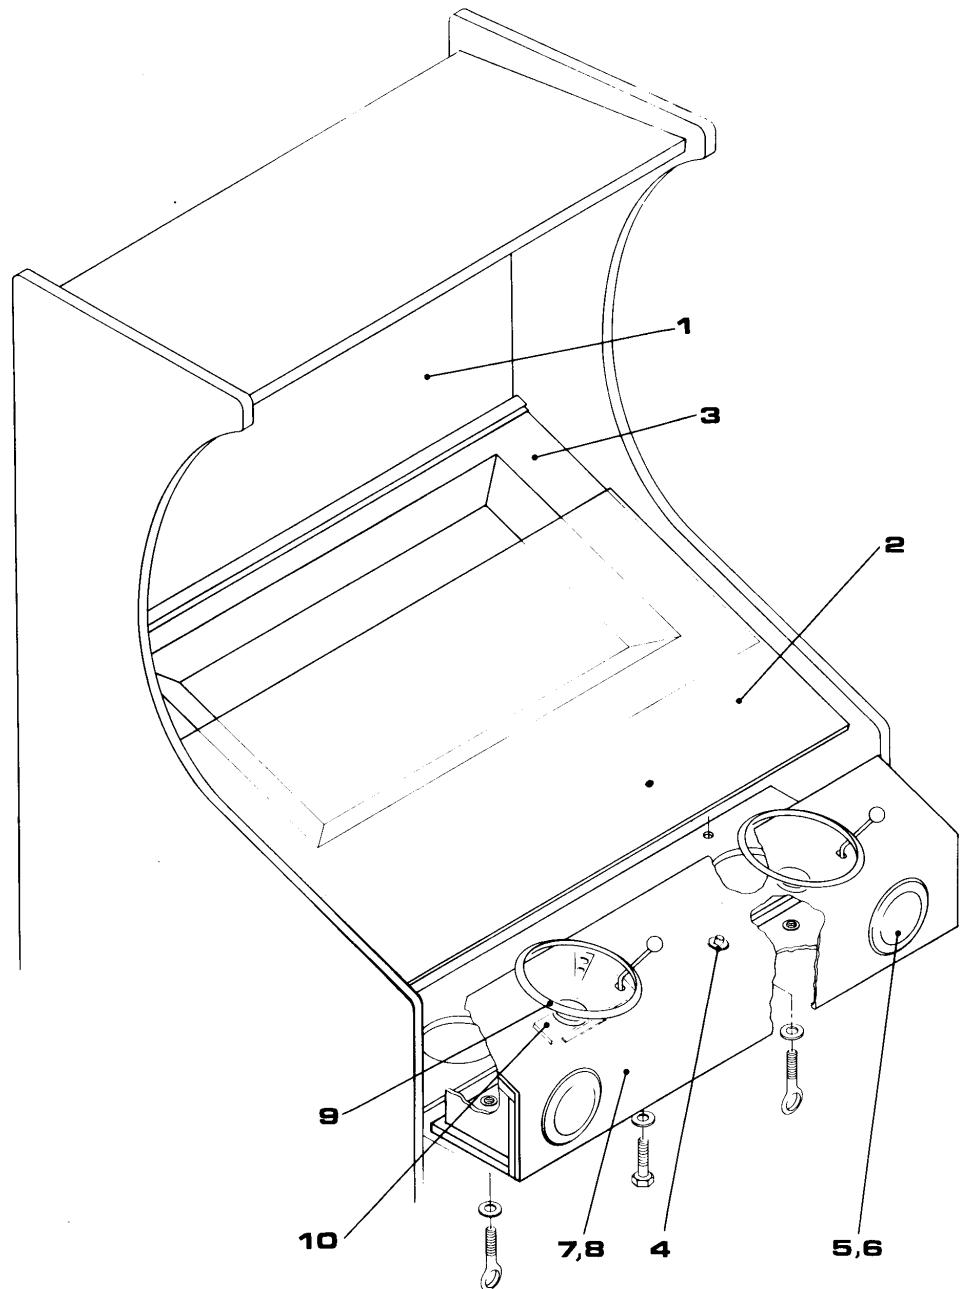


FIG. 2
STEERING BOX AND DISPLAY

Figure No. 2

EXIDY

ITEM	PART NO.	DESCRIPTION
1.	DR-PLEX-17"	Plex panel destruction derby
2.	DR-PLEX-19 $\frac{3}{4}$ "	Plex panel frame
3.	23" BEZEL	Bezel
4.	T936-DI-BLK.	Start switch
5.	4" SPKR.-GRL.	Speaker grill
6.	4" SPKR.	Speaker
7.	DR-ST-BOX-COMP.	Steering box complete
8.	DR-ST-BOX-EMPTY	Steering box (less P.C.B.'s & harness)
9.	82-2111	Steering wheel
10.	DR-ST-ASSY	Steering Assy.

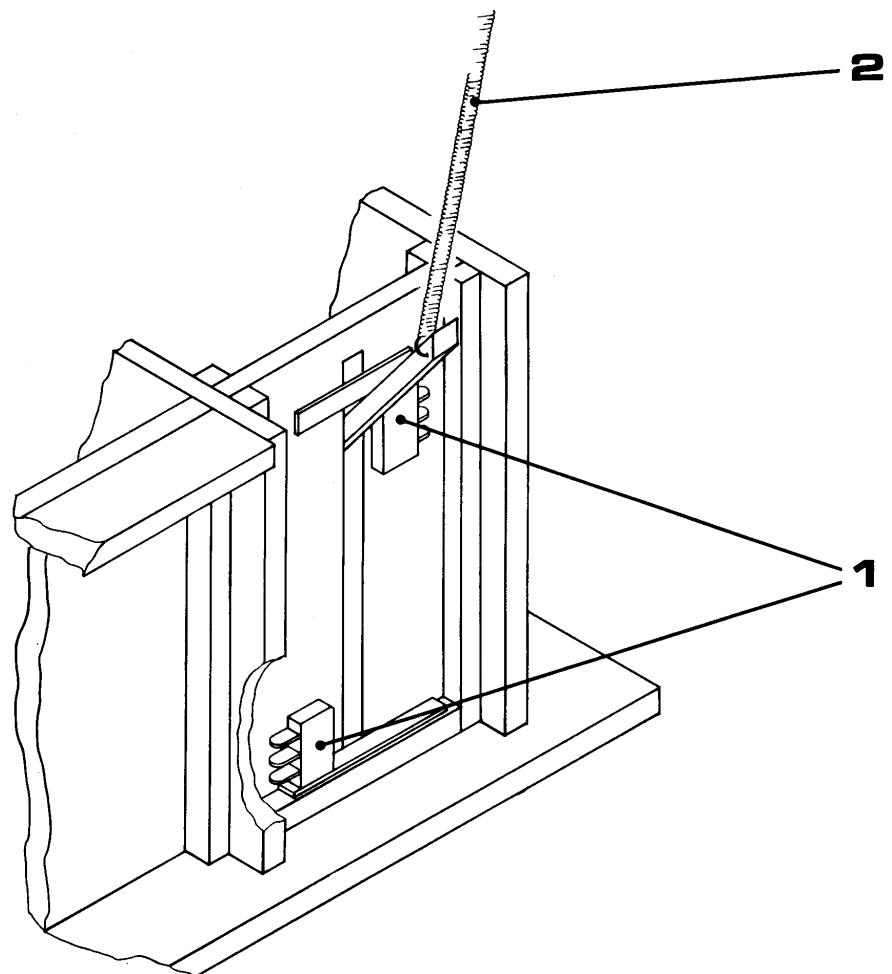


Figure No. 3

EXIDY

ITEM	PART NO.	DESCRIPTION
1.	E51-50R	Foot pedal micro switch
2.	DR-FP-SPRING	Foot pedal spring

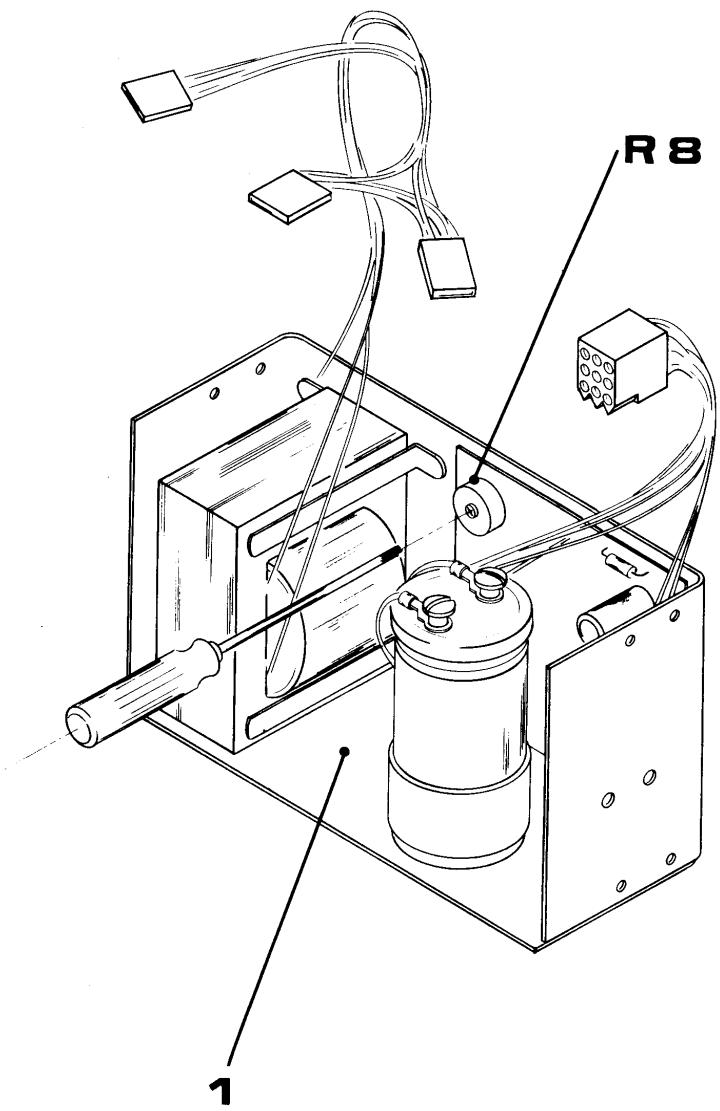


Figure No. 4

EXIDY

ITEM	PART NO.	DESCRIPTION
1.	EAPS-5-10	Power supply (including harness)

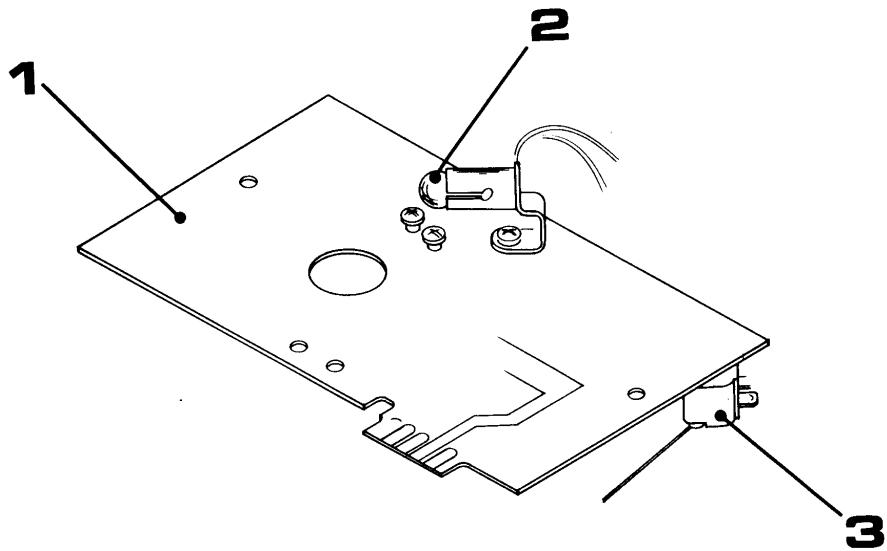


Figure No. 5		EXIDY
ITEM	PART NO.	DESCRIPTION
1.	DR-OCB-ST	Steering P.C.B.
2.	1847 BULB	Twist lock bulb
3.	E51-50R	Micro Switch

NOTE:

The Filament of the light bulb on optical control boards (steering boards) must be properly aligned. The bulb (over transistors marked "A", "B") must be directly between and over (in line with) both transistors. Failure to align bulb properly will result in faulty or intermittent steering. Alignment should be initially correct from factory.

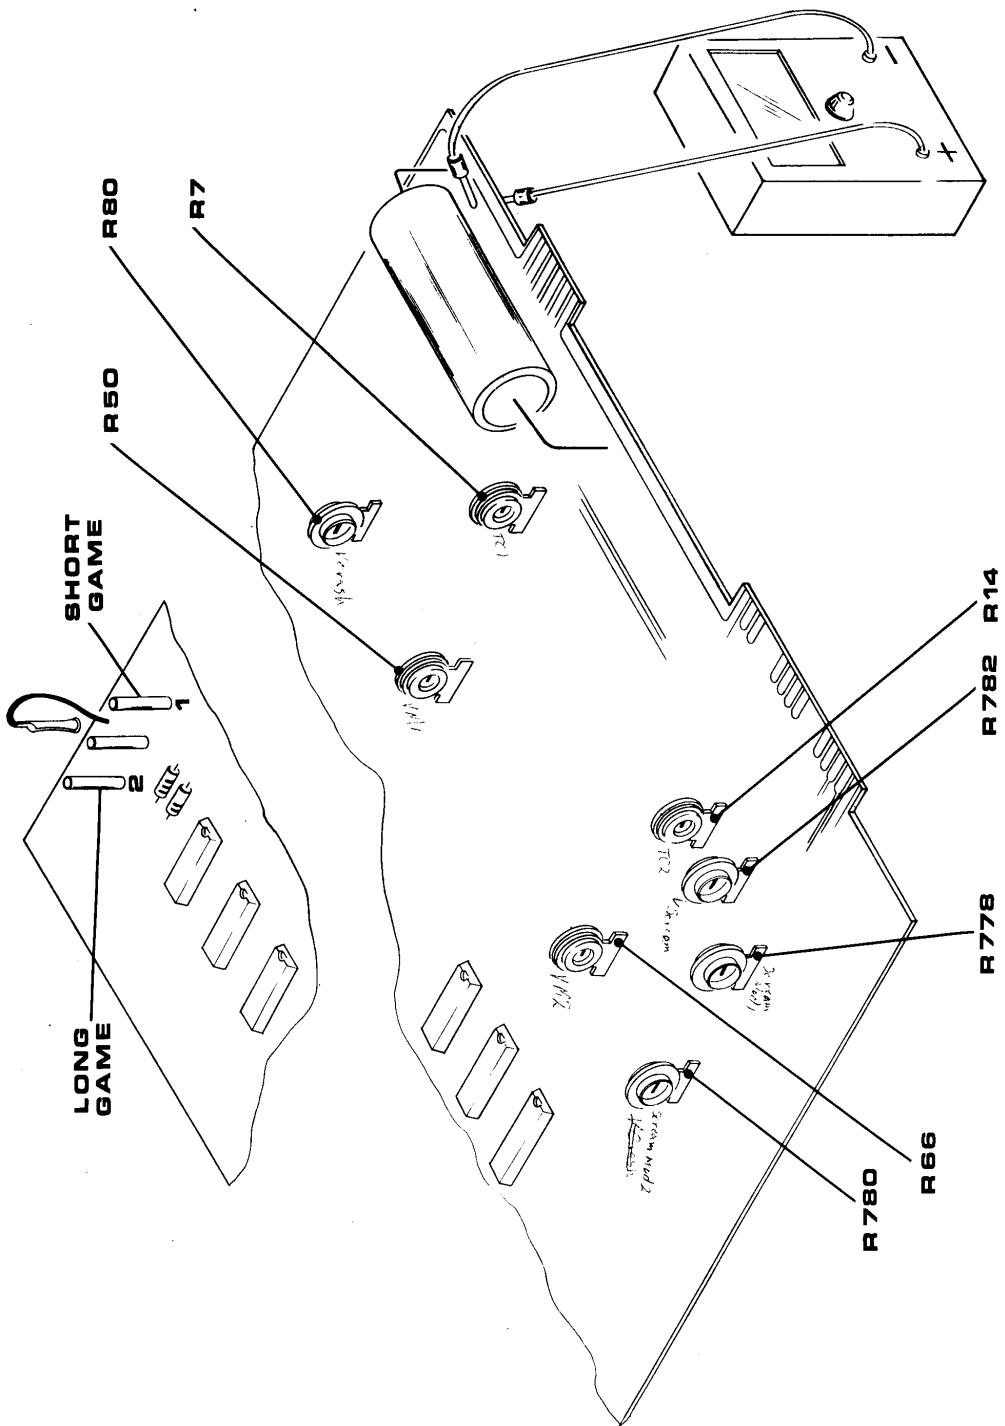


FIG 6
DR1-A

FIG 7
DR SYSTEM BLOCK DIAGRAM

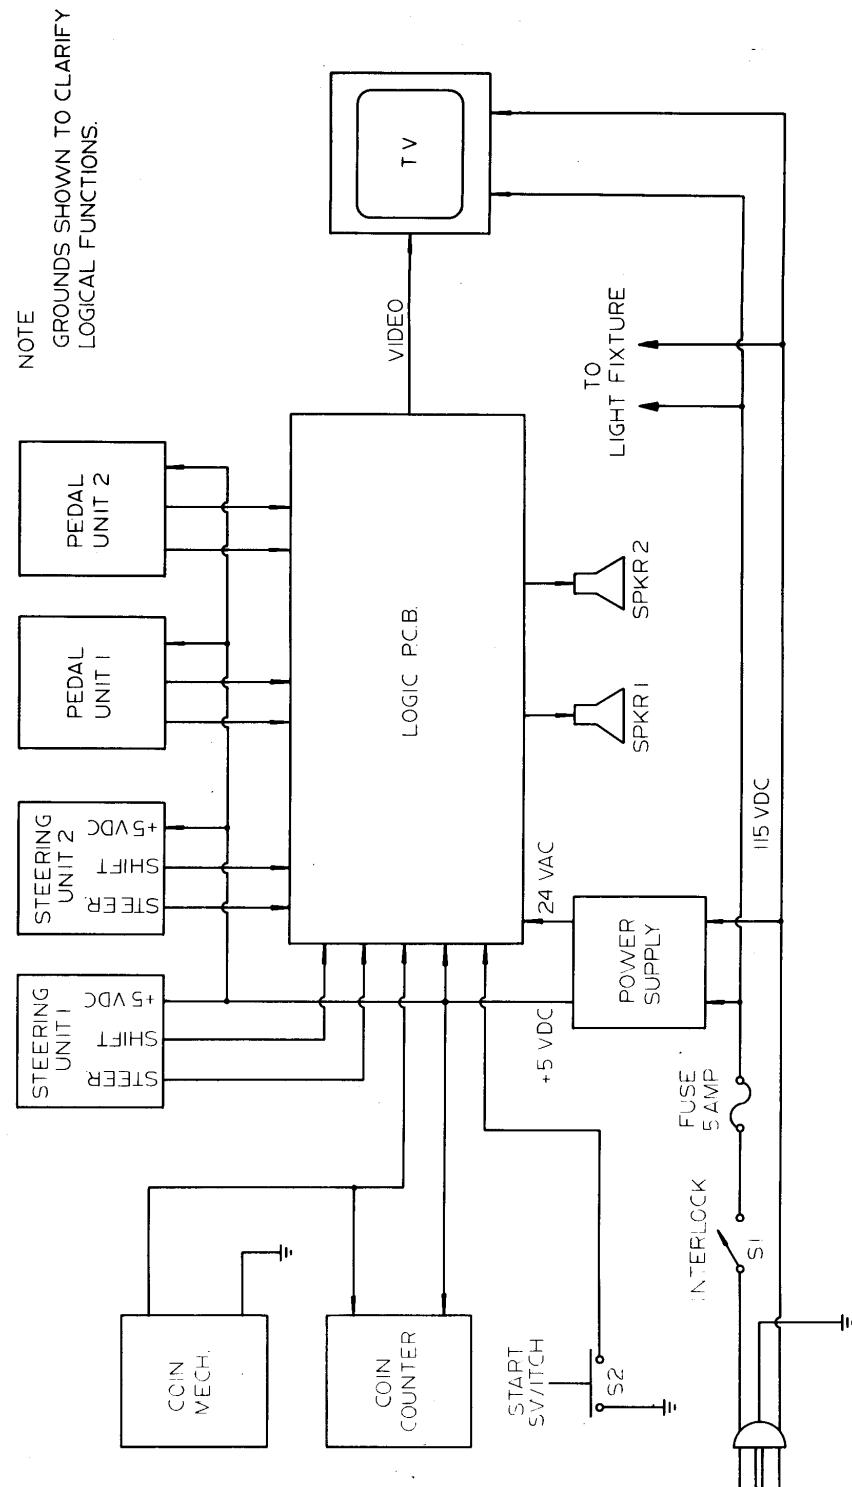


FIG 8
DR WIRING DIAGRAM

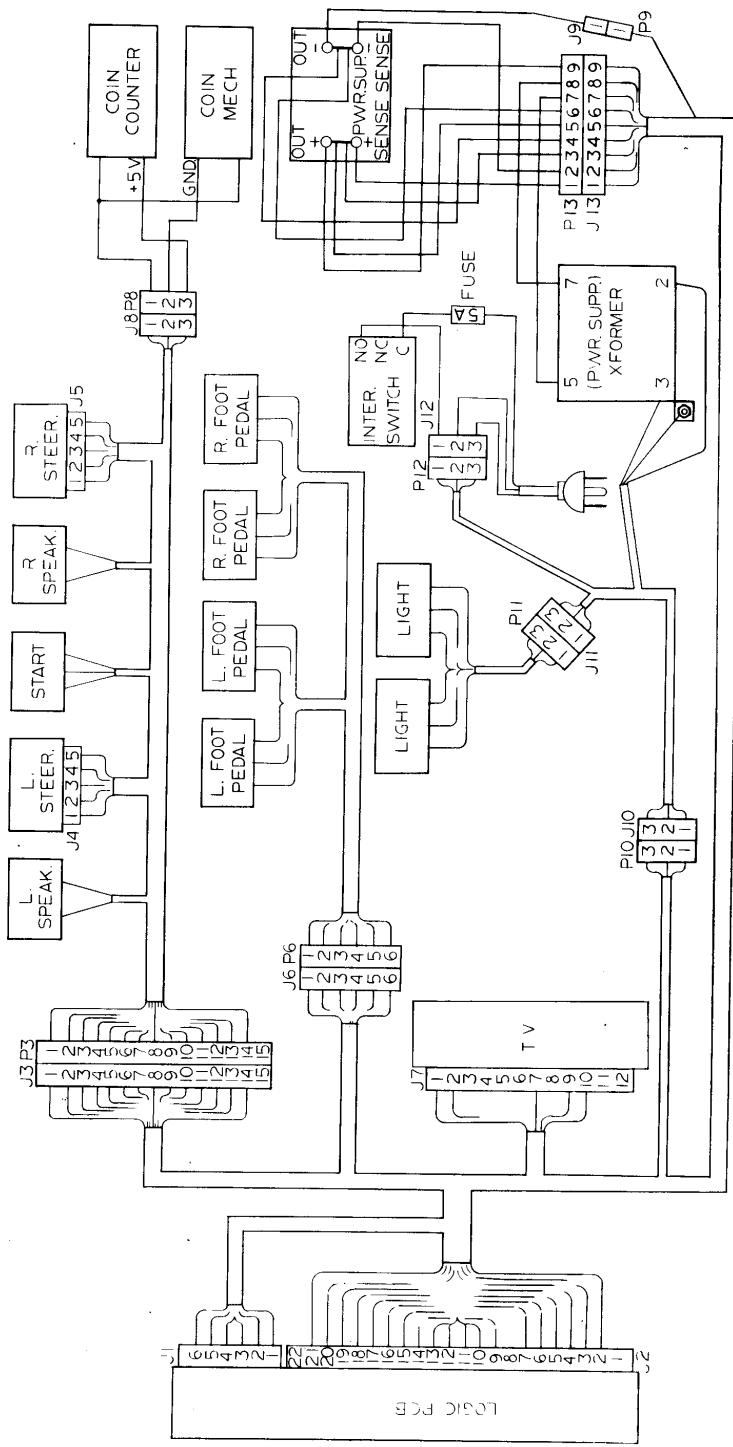


Figure No. 8

EXIDY			
FROM:	TO:	FROM:	TO:
J1 (PIN 1)	J13 (PIN 2)	P3 (PIN 11)	Left speaker
J1 (PIN 2)	J13 (PIN 1)	P3 (PIN 10)	Left speaker
J1 (PIN 3)	J13 (PIN 7)	P3 (PIN 13)	Right speaker
J1 (PIN 4)	J13 (PIN 8)	P3 (PIN 12)	Right speaker
J1 (PIN 5)	J13 (PIN 9)	P3 (PIN 9)	Start
J1 (PIN 6)	P9 (PIN 1)	P3 (PIN 14)	J8 (PIN 1)
J2 (PIN 2)	J3 (PIN 11)	P3 (PIN 5)	J4 (PIN 1)
J2 (PIN 3)	J3 (PIN 10)	P3 (PIN 4)	J4 (PIN 3)
J2 (PIN 4)	J3 (PIN 13)	P8 (PIN 1)	Coin counter
J2 (PIN 5)	J3 (PIN 12)	P6 (PIN 4)	Foot pedal
J3 (PIN 9)	J2 (PIN 6)	P6 (PIN 3)	Foot pedal
J3 (PIN 14)	J2 (PIN 7)	P3 (PIN 3)	J4 (PIN 5)
J2 (PIN 9)	J3 (PIN 5)	P3 (PIN 8)	J5 (PIN 4)
J2 (PIN 10)	J3 (PIN 4)	P3 (PIN 7)	J5 (PIN 3)
J2 (PIN 11)	J6 (PIN 4)	P6 (PIN 6)	Foot pedal
J2 (PIN 12)	J6 (PIN 3)	P6 (PIN 5)	Foot pedal
J2 (PIN 13)	J3 (PIN 3)	P3 (PIN 6)	J5 (PIN 5)
J2 (PIN 14)	J3 (PIN 8)	P13 (PIN 5)	+ Out sense
J2 (PIN 15)	J3 (PIN 7)	P13 (PIN 6)	- Sense
J2 (PIN 16)	J6 (PIN 6)	P13 (PIN 3)	+ Sense
J2 (PIN 17)	J6 (PIN 5)	P13 (PIN 4)	- Out
J2 (PIN 18)	J3 (PIN 6)	J13 (PIN 5)	J3 (PIN 1)
J7 (PIN 1)	J2 (PIN 20)	J13 (PIN 6)	J3 (PIN 2)
J2 (PIN 21)	J7 (PIN 2)	J13 (PIN 3)	J6 (PIN 1)
P13 (PIN 2)	- Sense (P.S.)	J13 (PIN 4)	J6 (PIN 2)
P13 (PIN 1)	+ Sense (P.S.)	J13 (PIN 4)	J6 (PIN 2)
P13 (PIN 7)	#5 of xformer	P3 (PIN 1)	J4 (PIN 1)
P13 (PIN 8)	#7 of xformer	P3 (PIN 2)	J4 (PIN 2)
P13 (PIN 9)	+ Out	P6 (PIN 1)	Foot pedal
J9 (PIN 1)	- Out	P6 (PIN 2)	Foot pedal

FIG 9
ACCELERATION (FOOT PEDAL) WIRING

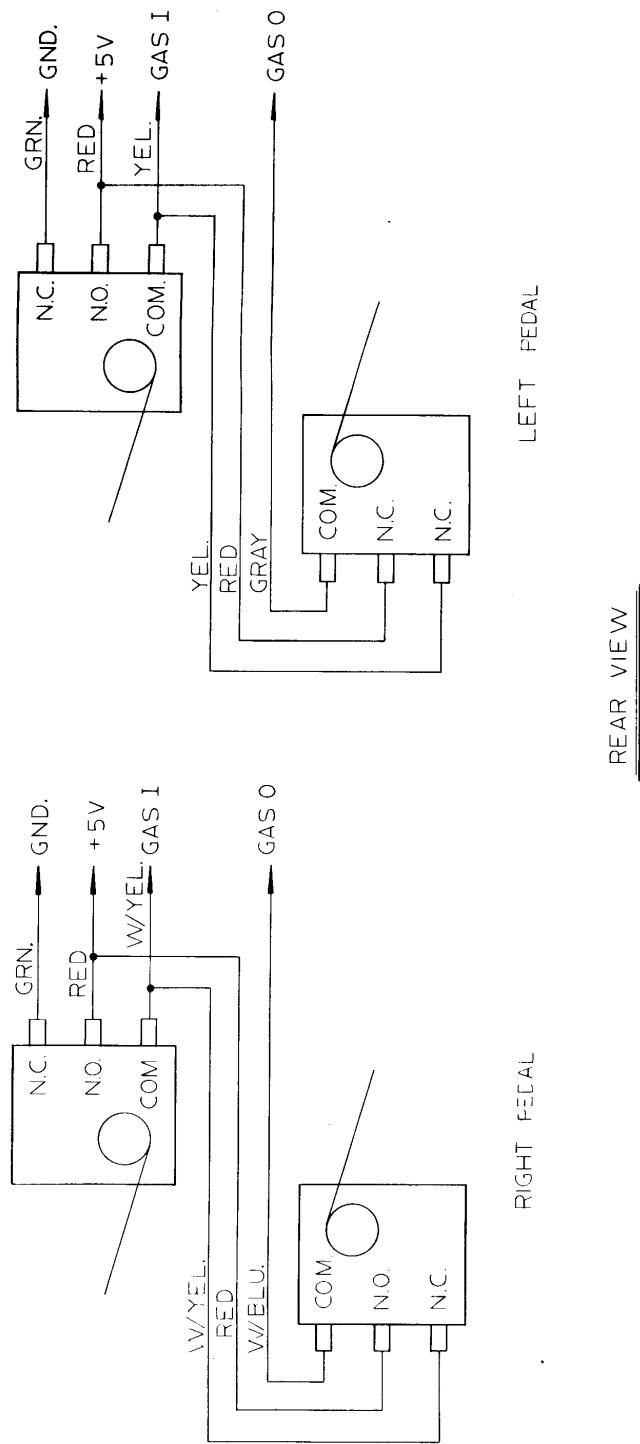
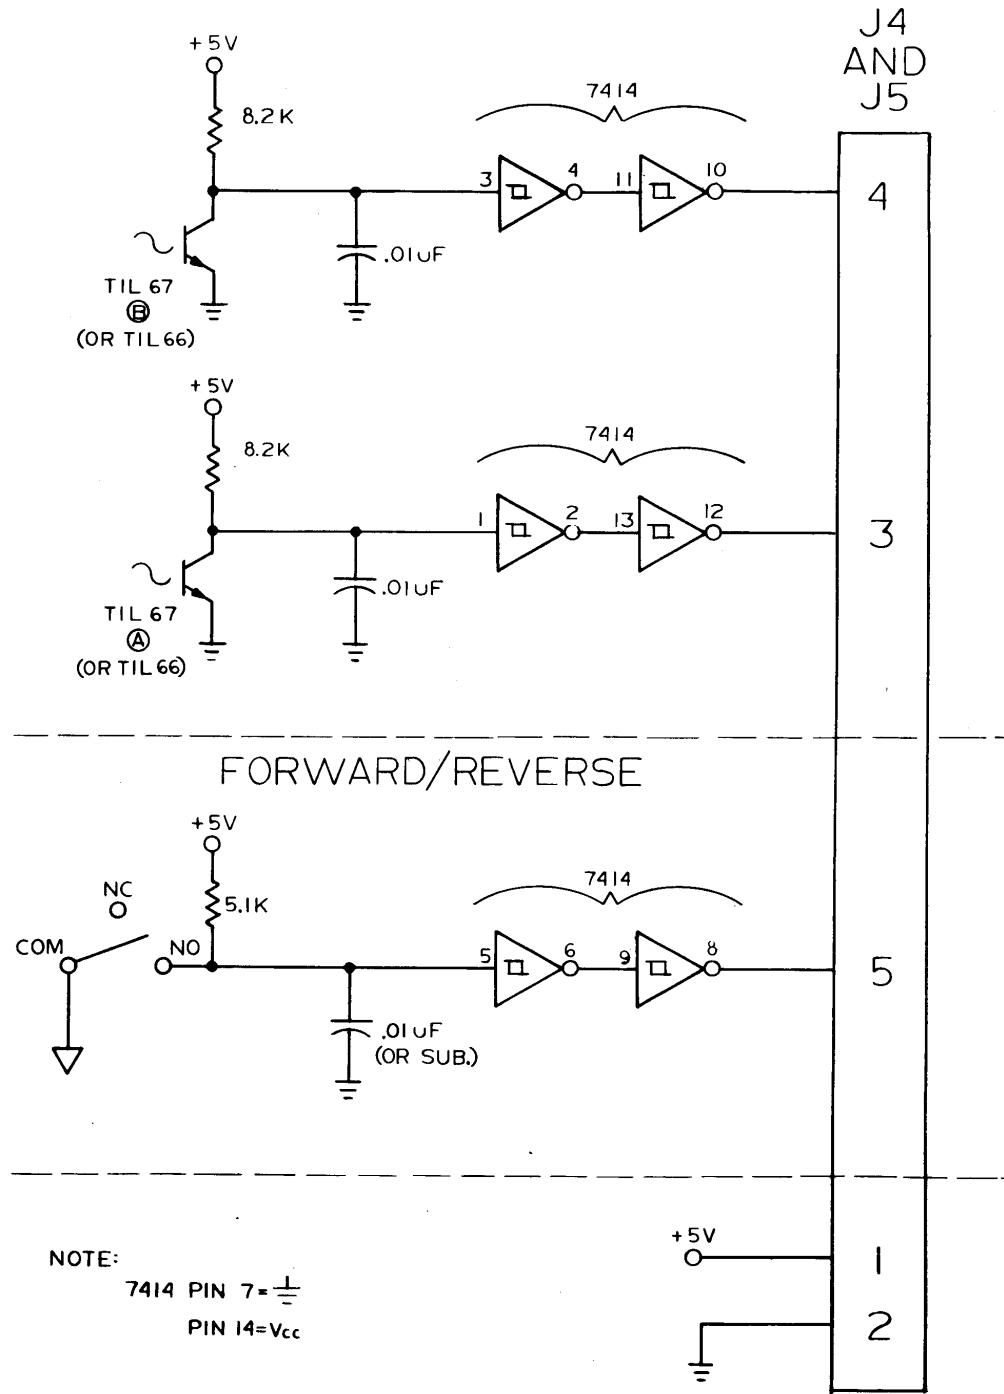


FIG 10
OPTICAL STEERING BOARD SCHEMATIC



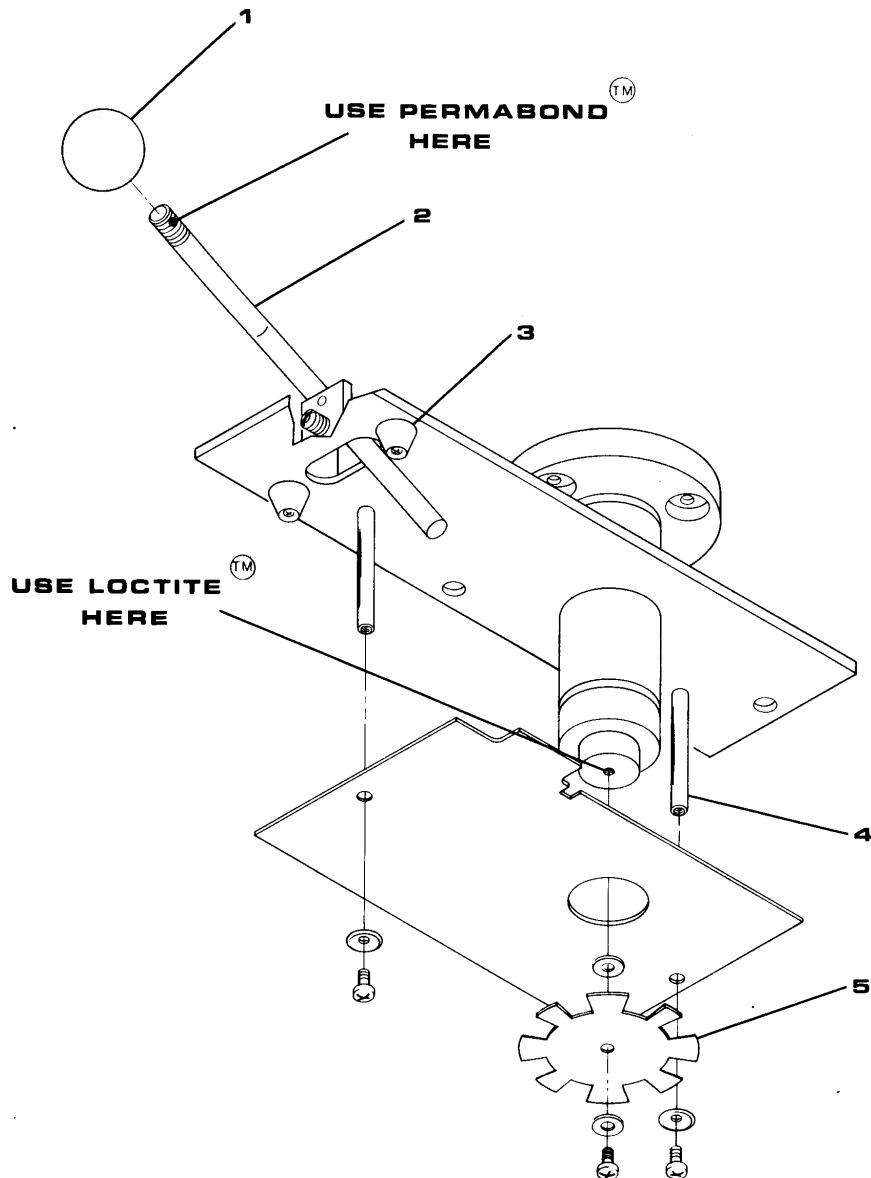


Figure No. 11

EXIDY


ITEM	PART NO.	DESCRIPTION
1.	DR-KN42	Shift Knob
2.	No No.	Shift Lever
3.	DR-2183	Lever Bumper
4.	DR-8351	Stand Off
5.	DR-ST-C8	Steering Mask

~~E~~ X | D Y INC.
2599 GARCIA AVE.
MOUNTAIN VIEW, CALIF. 94043
(415) 968-7670

DEATH RACE

LOGIC DIAGRAM

DR - IA
5-17-76
updated 6-29-76

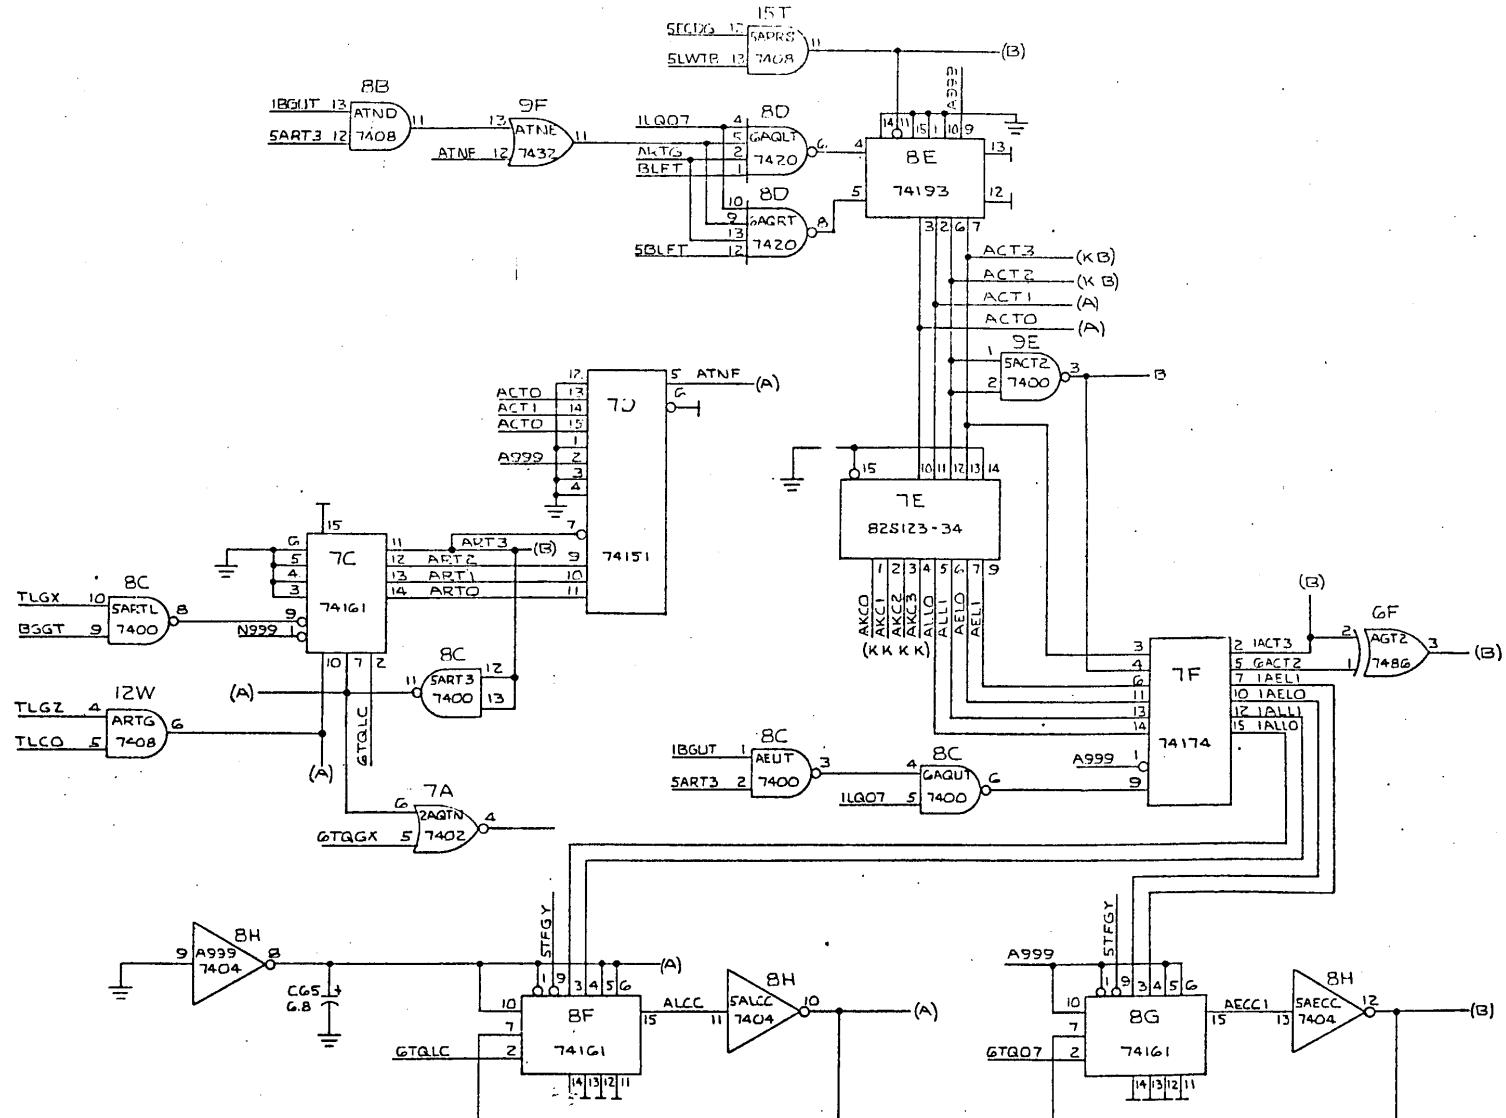


EXIDY, INC. 166 SAN LAZARO ST.
SUNNYVALE, CAL 94086 (408) 733-1104


5-6-76

RIGHT
DRONE (1)

A

DD-2A

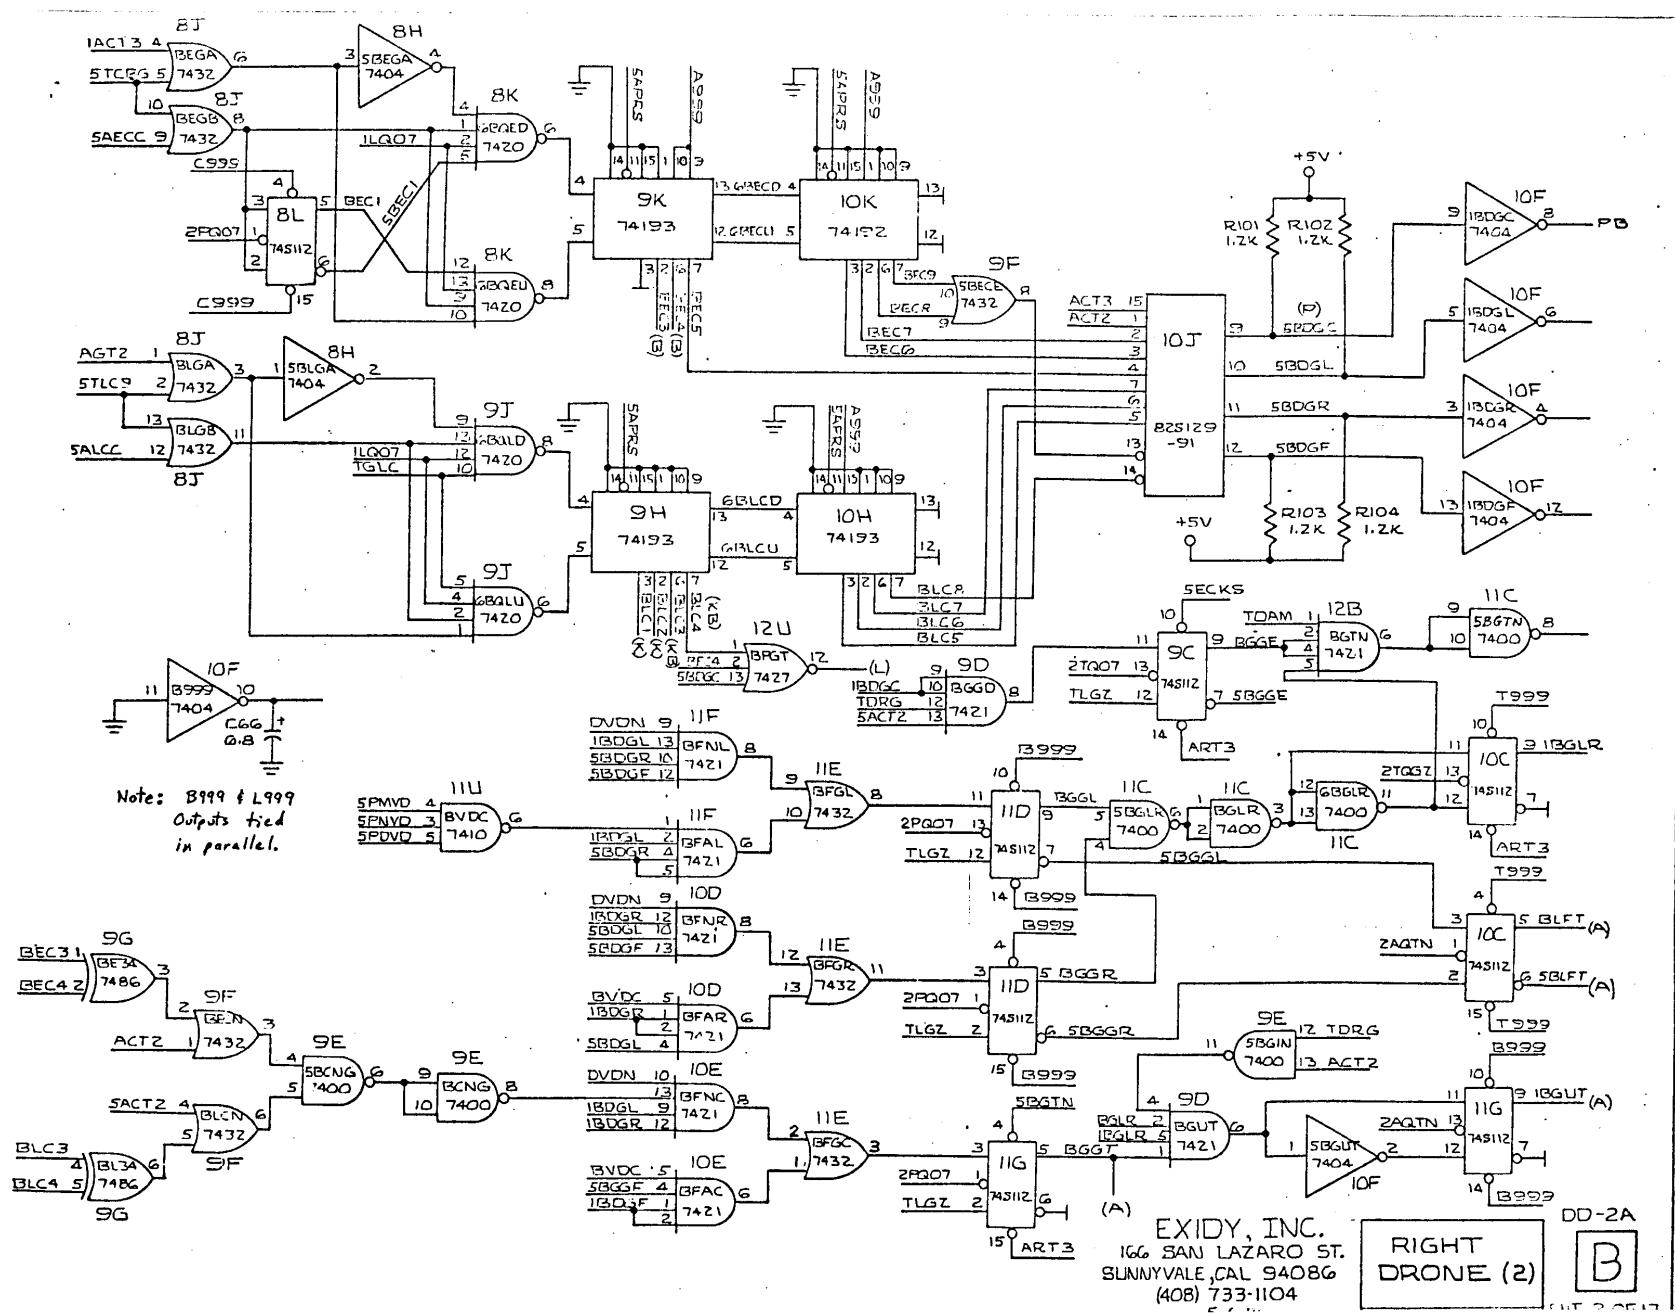

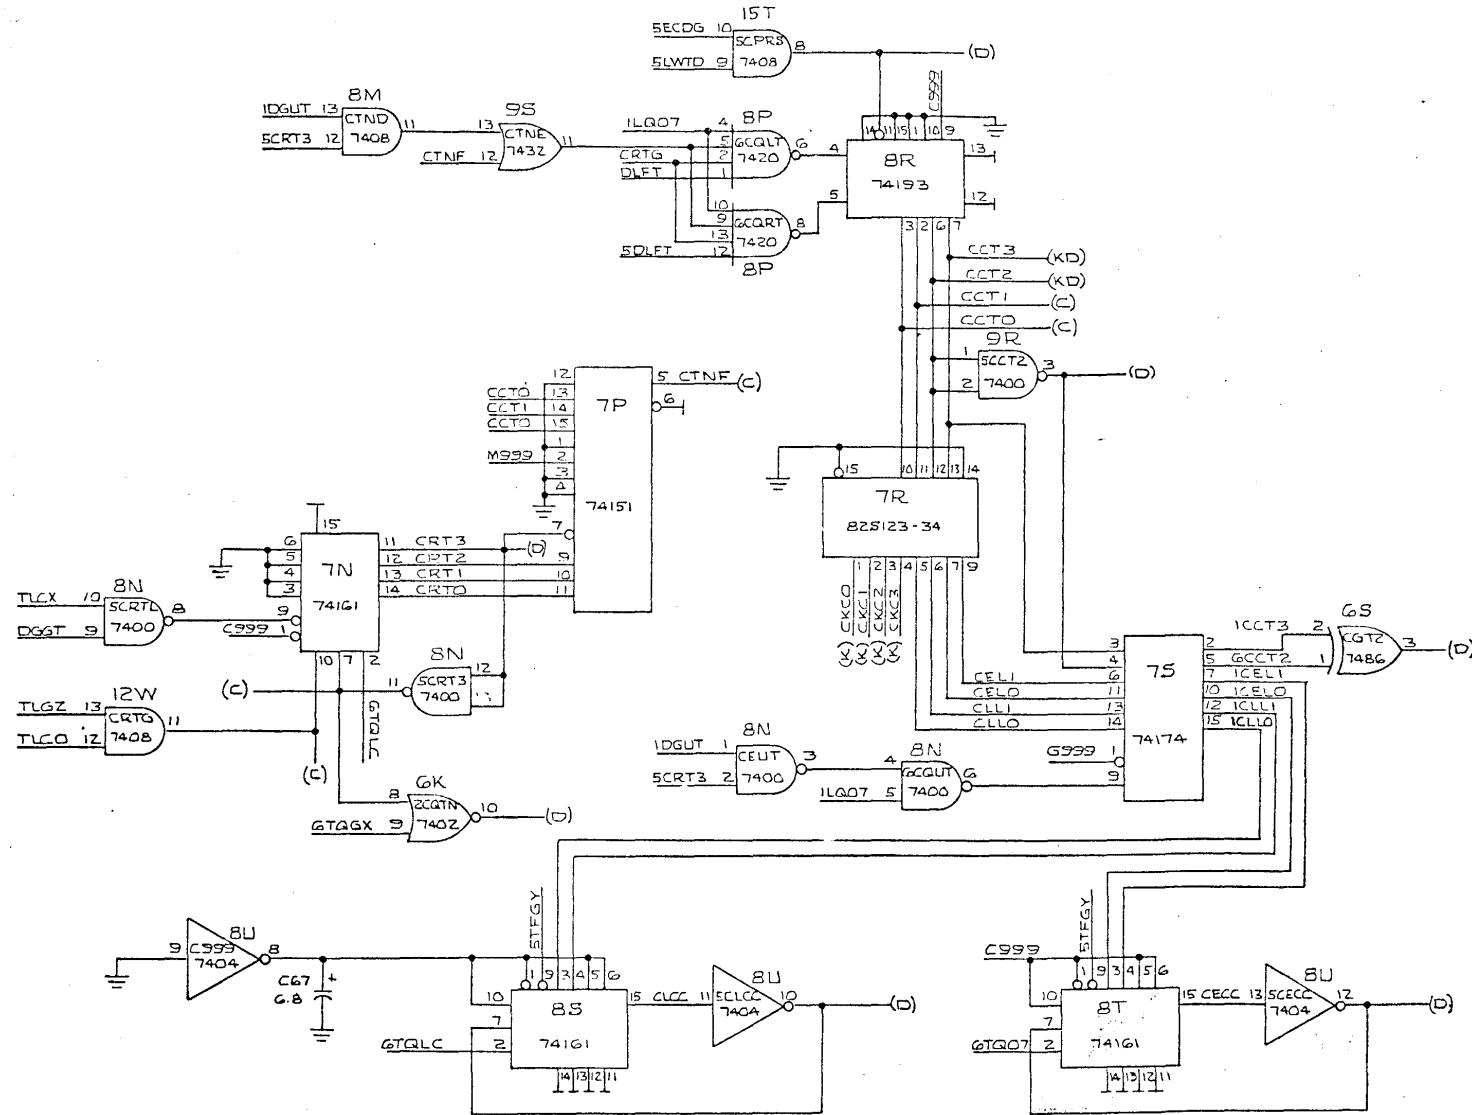



EXIDY; INC.
166 SAN LAZARO ST.
SUNNYVALE, CAL 94086
(408) 733-1104
5-6-76

LEFT
DRONE (1)


C


DD-2A
(1) C
SHEET 3 OF

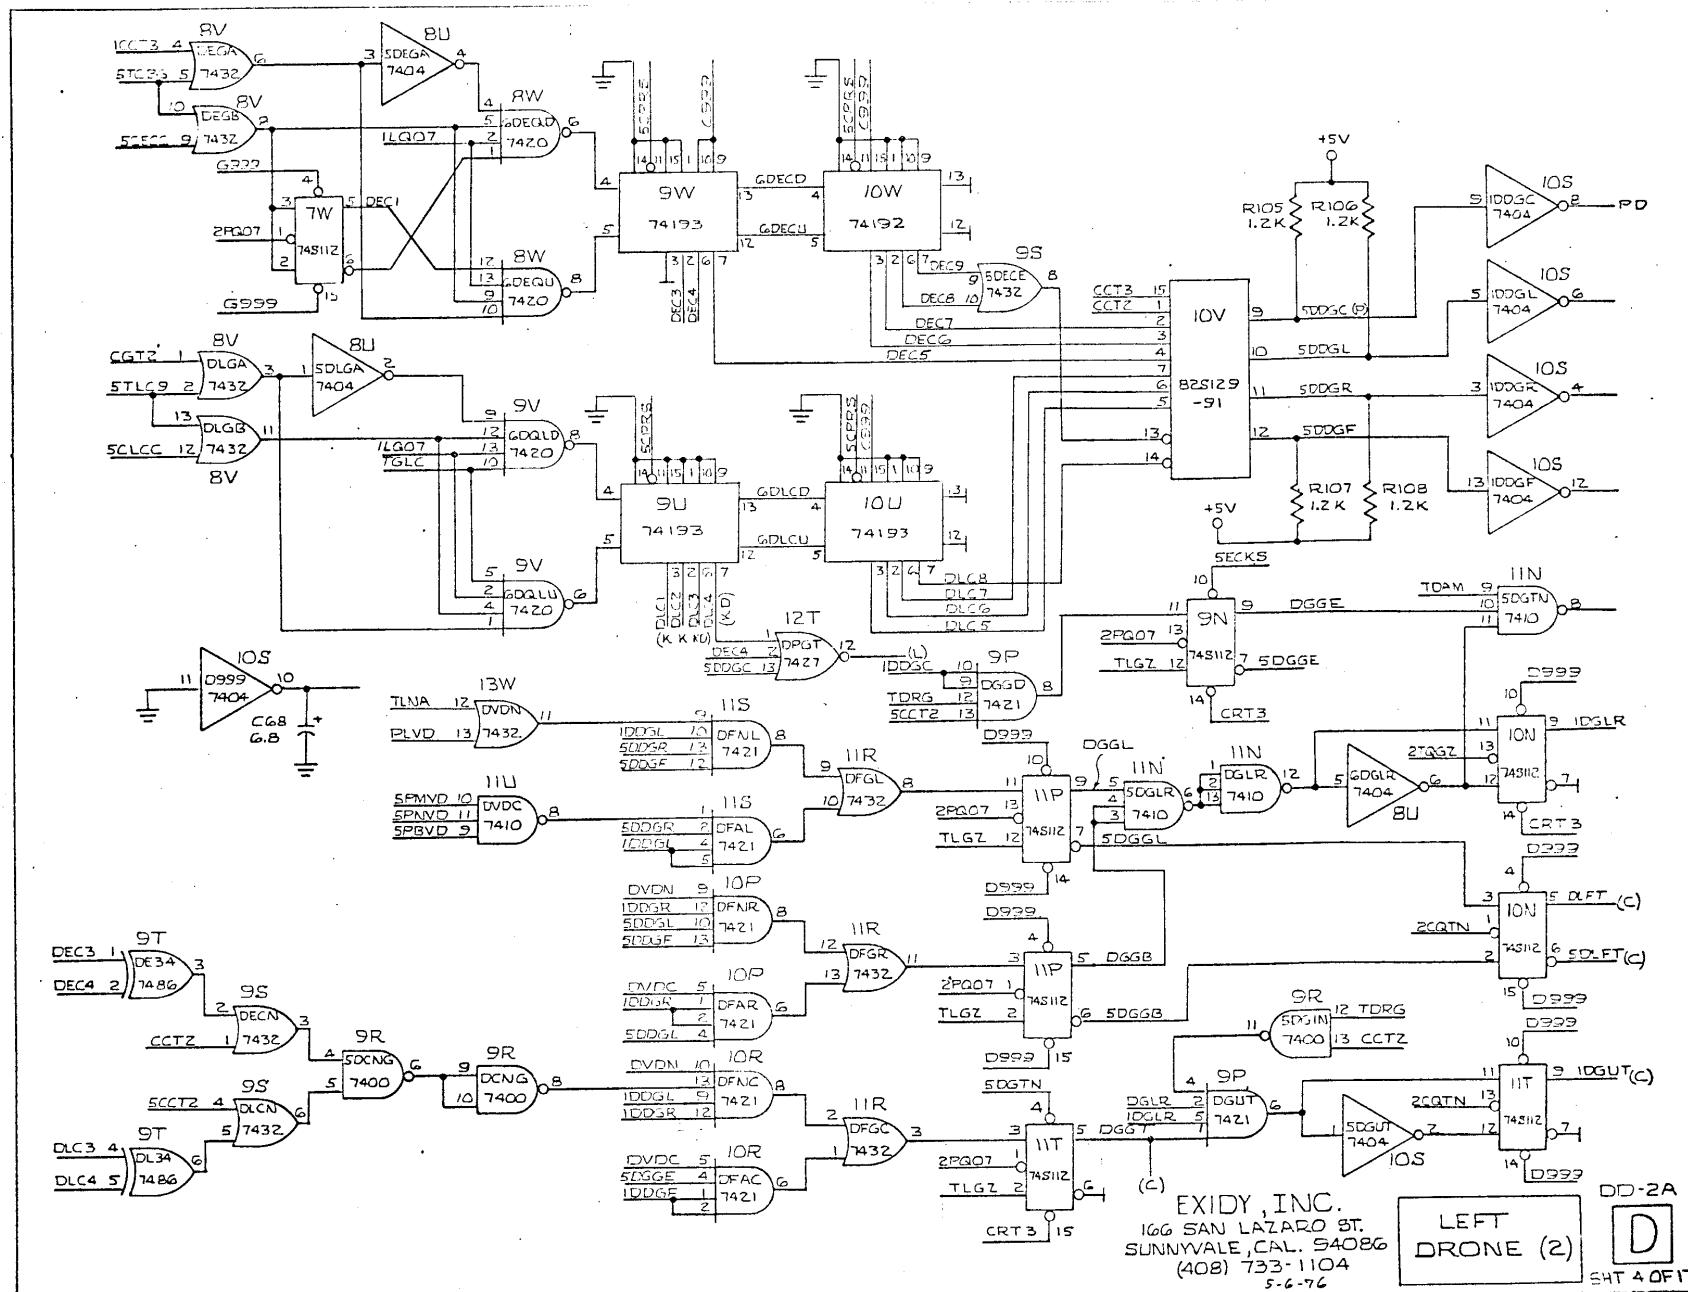

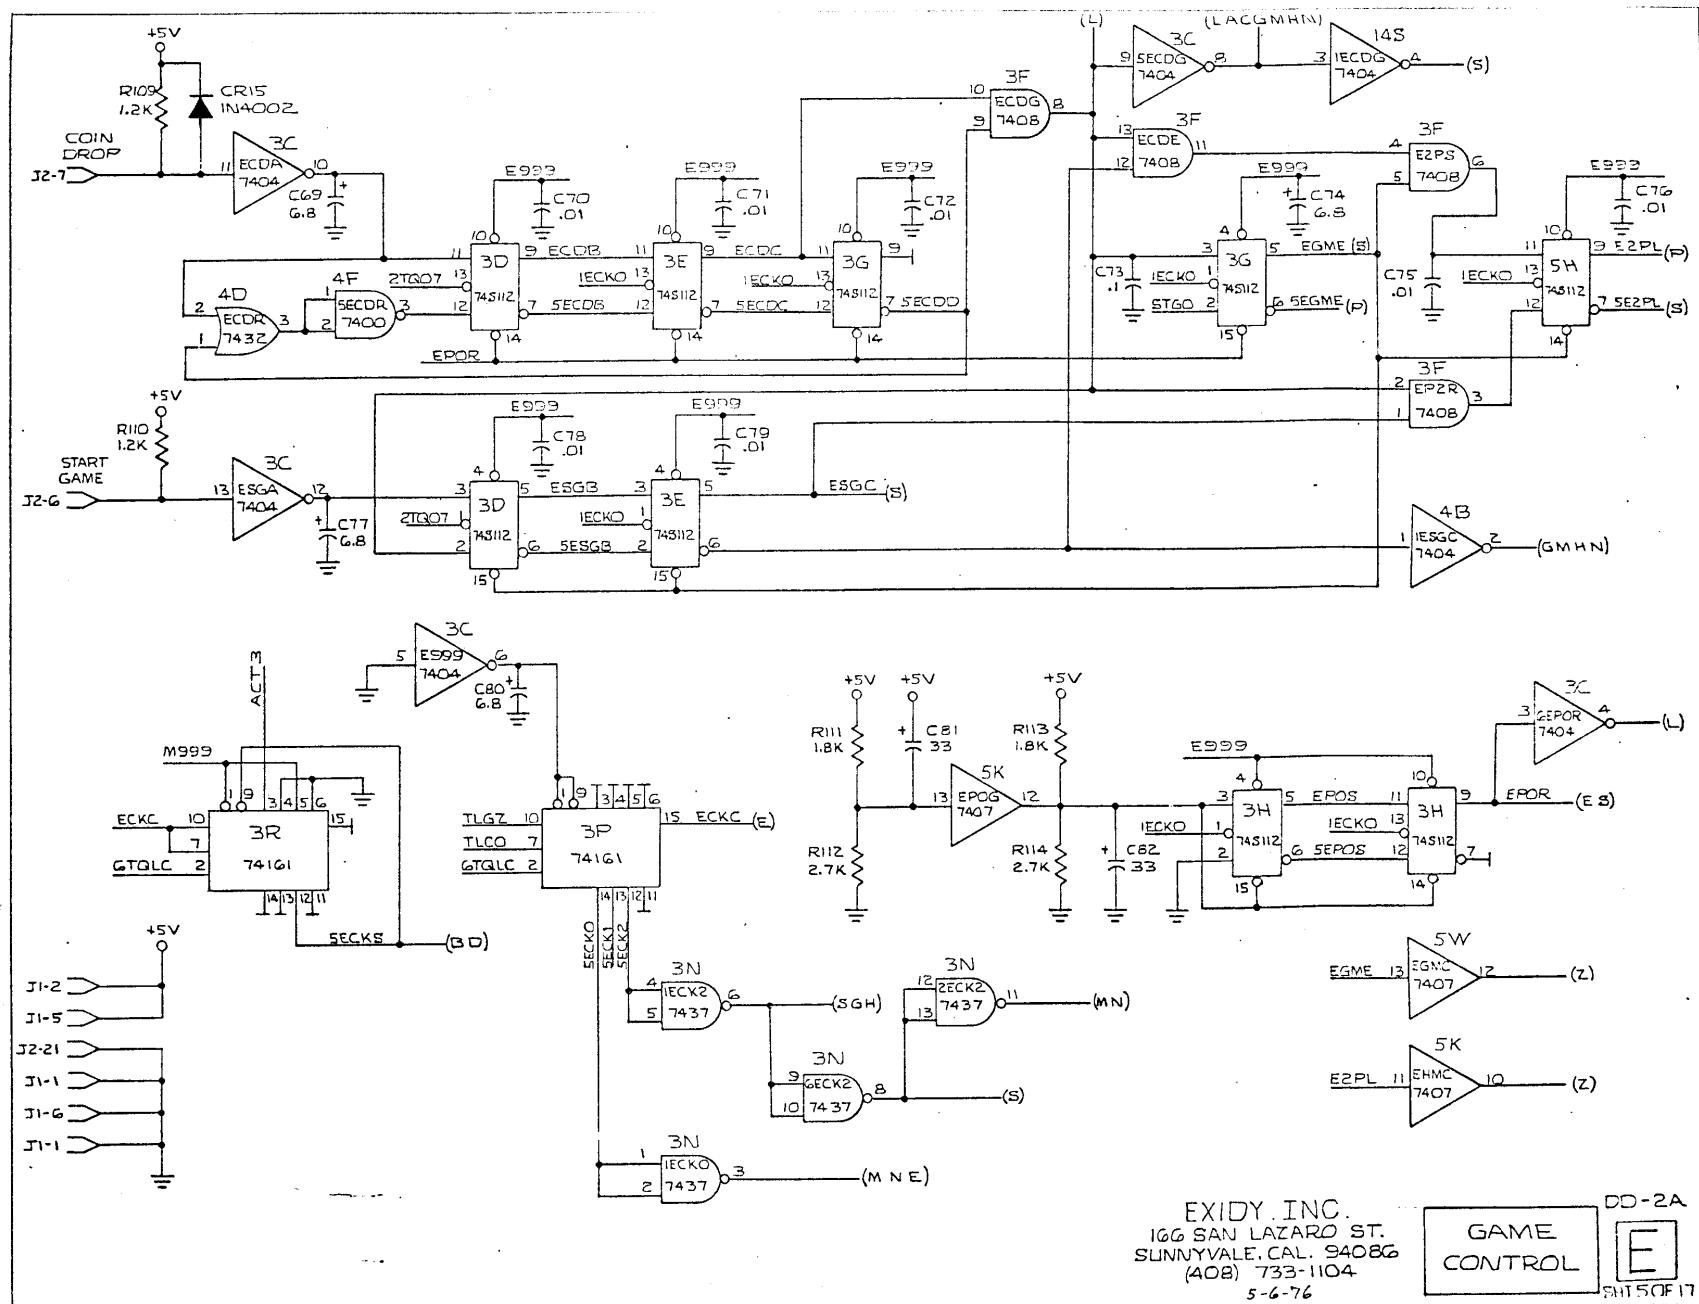

EXIDY INC.
166 SAN LAZARO ST.
SUNNYVALE, CAL. 94086
(408) 733-1104
5-6-76

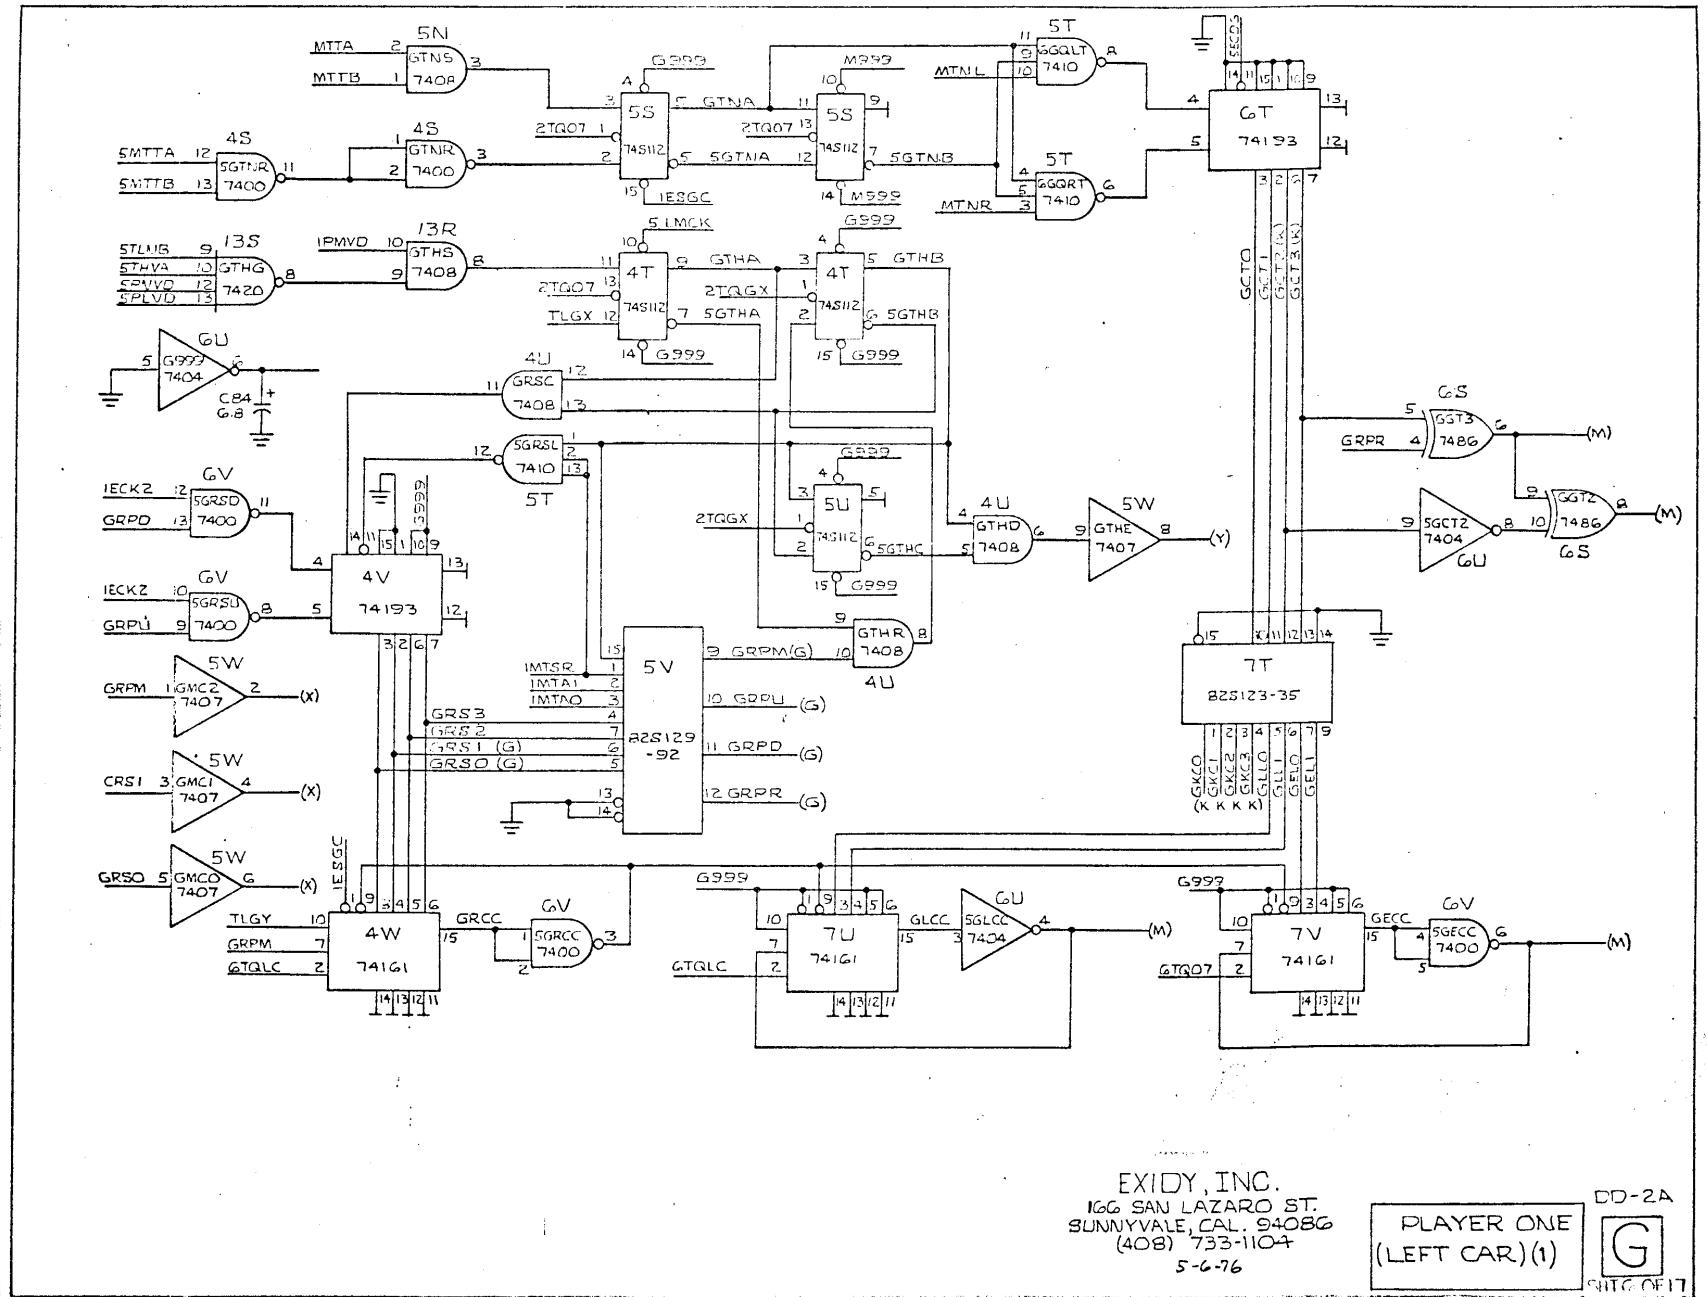

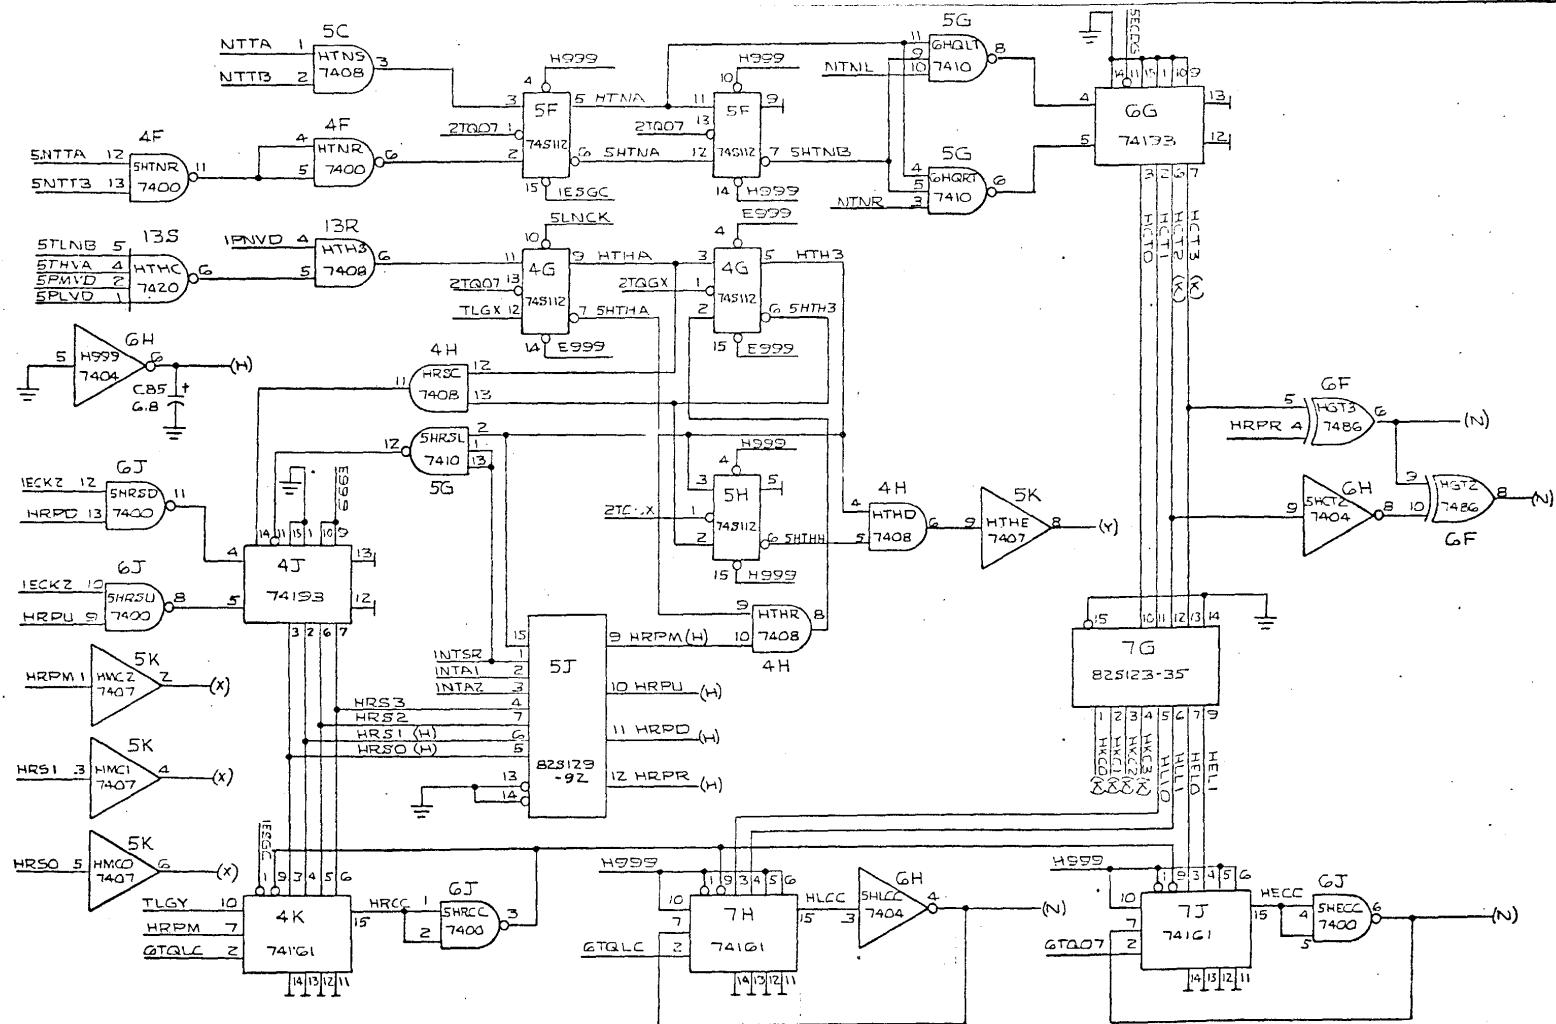


EXIDY, INC.
166 SAN LAZARO ST.
SUNNYVALE, CAL 94086
(408) 733-1104

5-6-76

PLAYER TWO
(RIGHT CAR)(1)

DD-2A


1

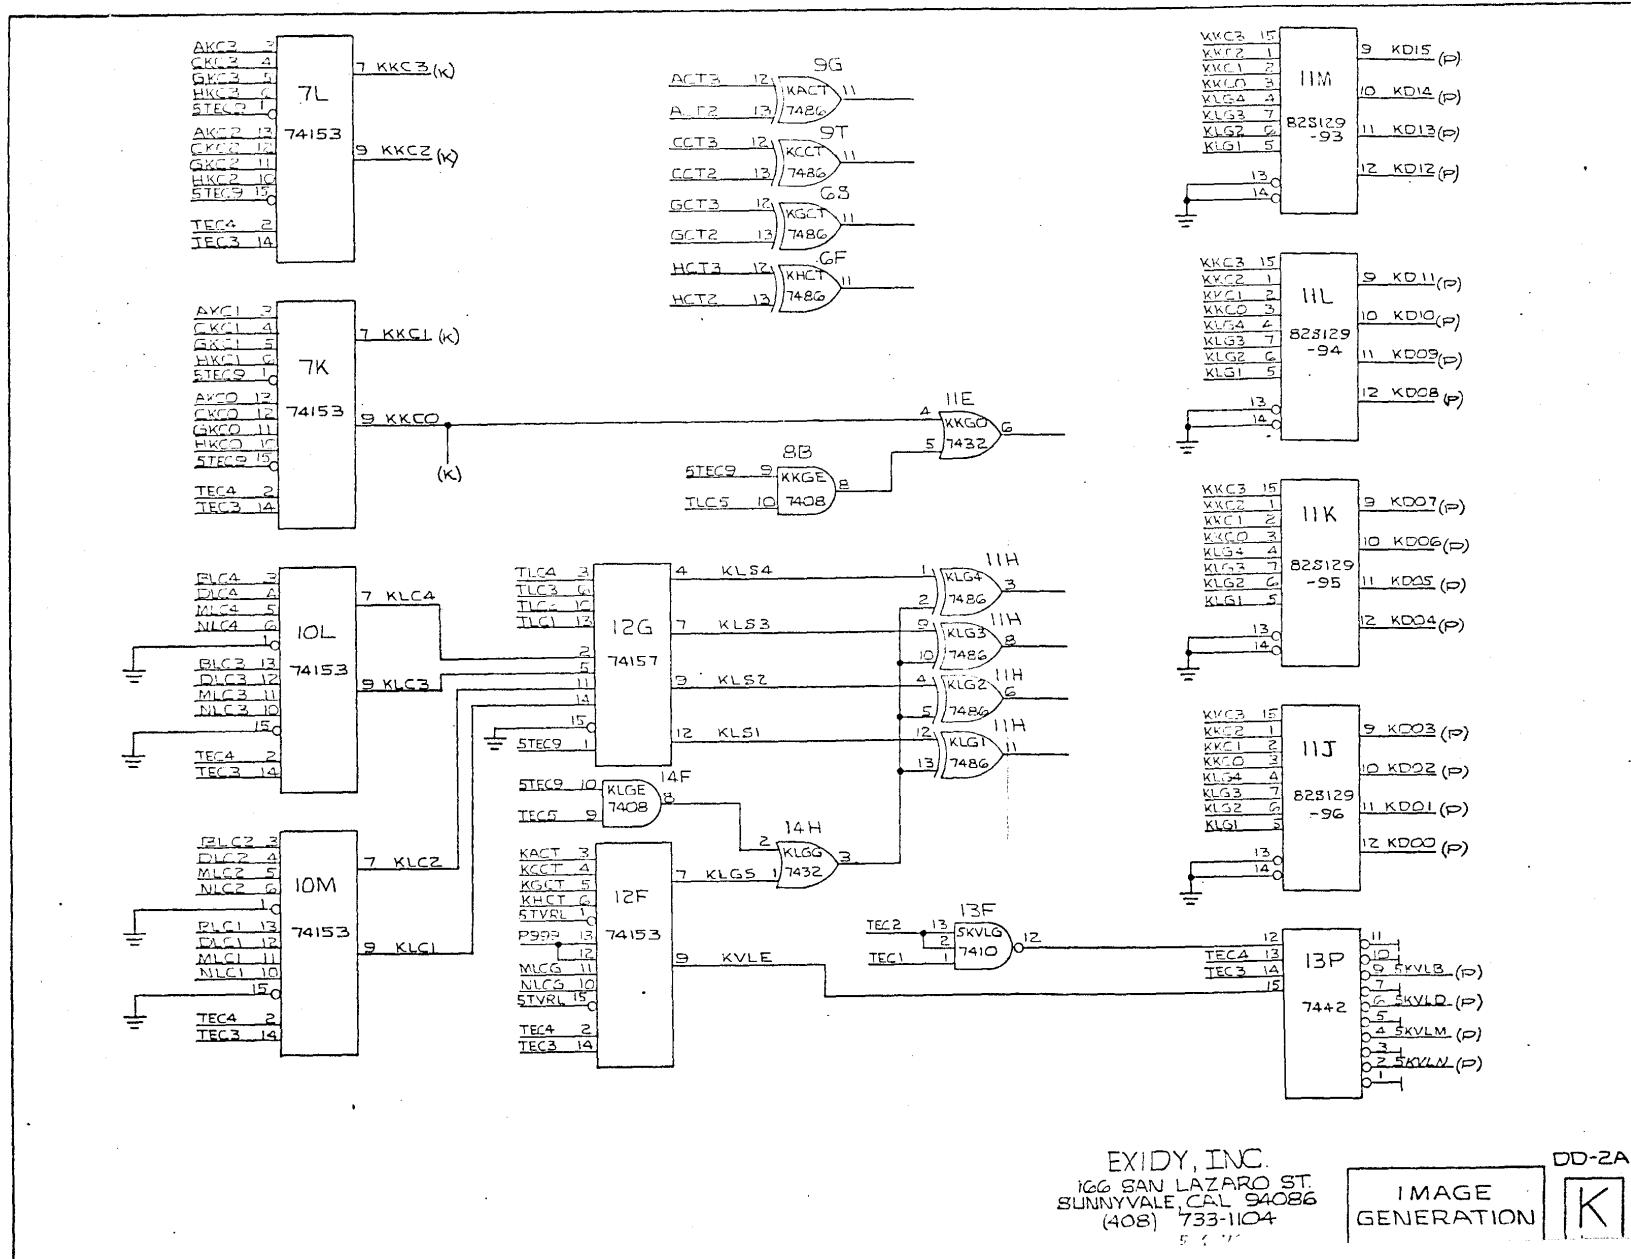

EXIDY, INC.
166 SAN LAZARO ST.
SUNNYVALE, CAL 94086
(408) 733-1104

IMAGE GENERATION


DD-2A

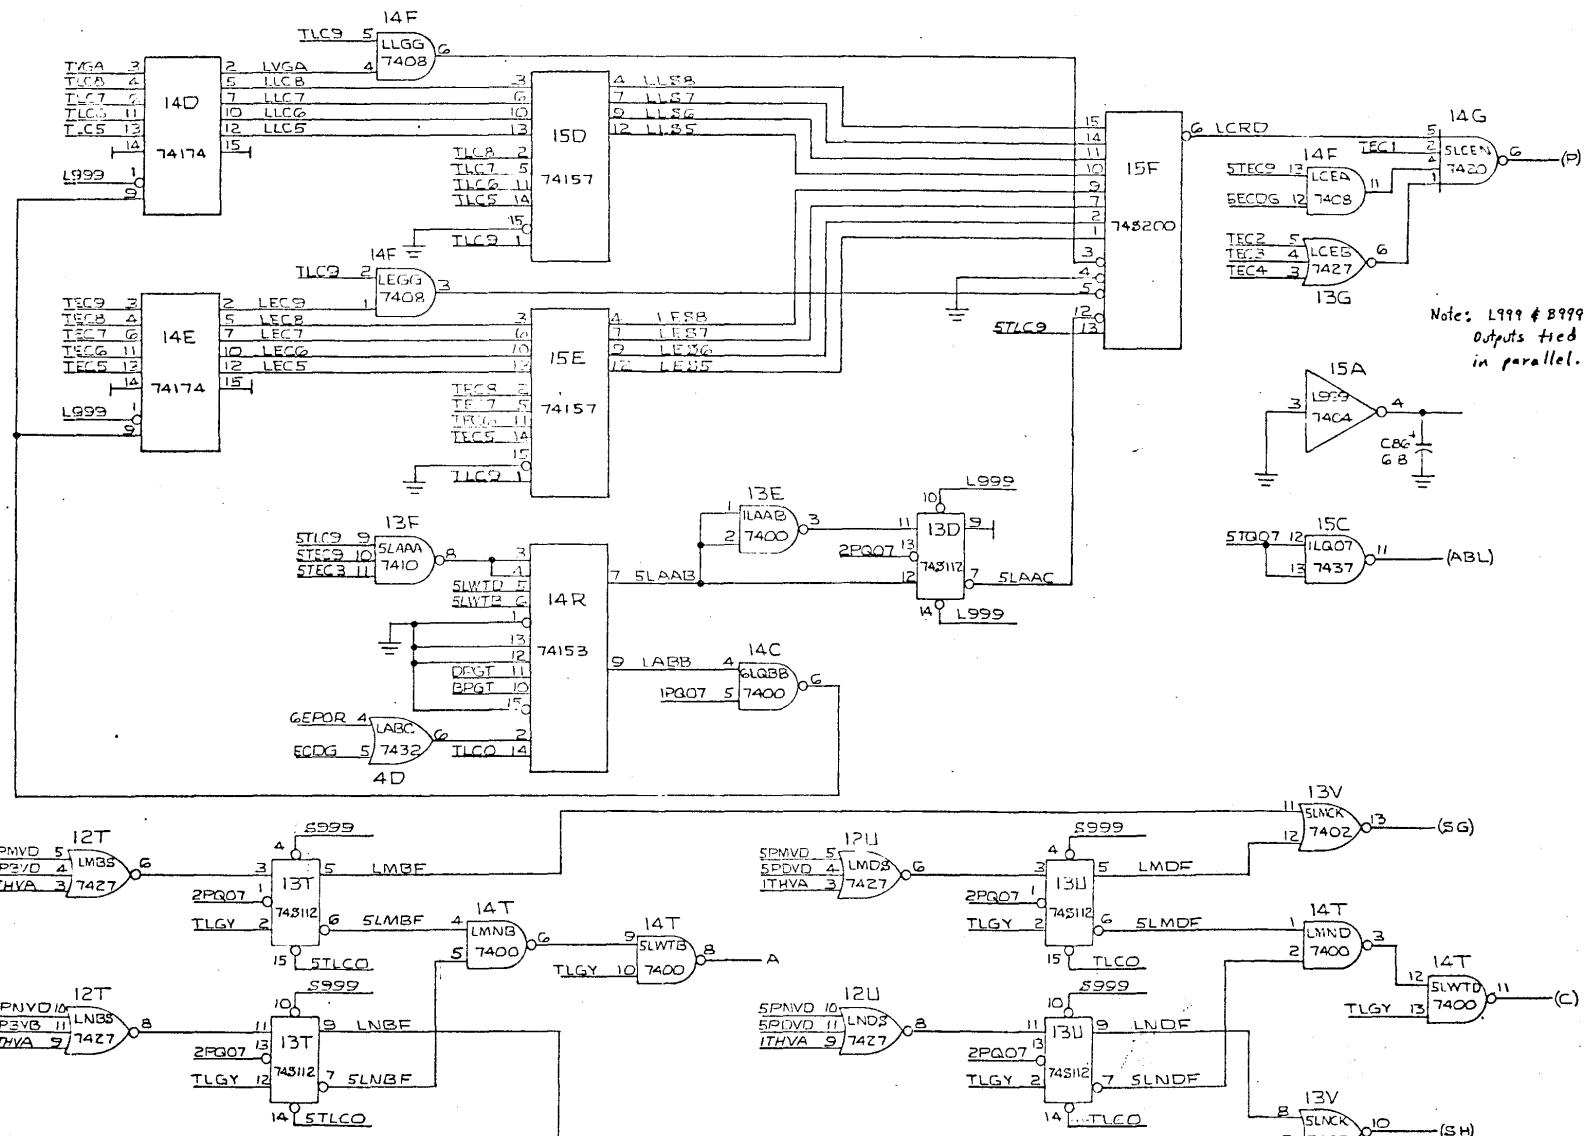


EXIDY, INC.
166 SAN LAZARO ST.
SUNNYVALE, CAL 94086
(408) 733-1104

CRASH

- DD-2A

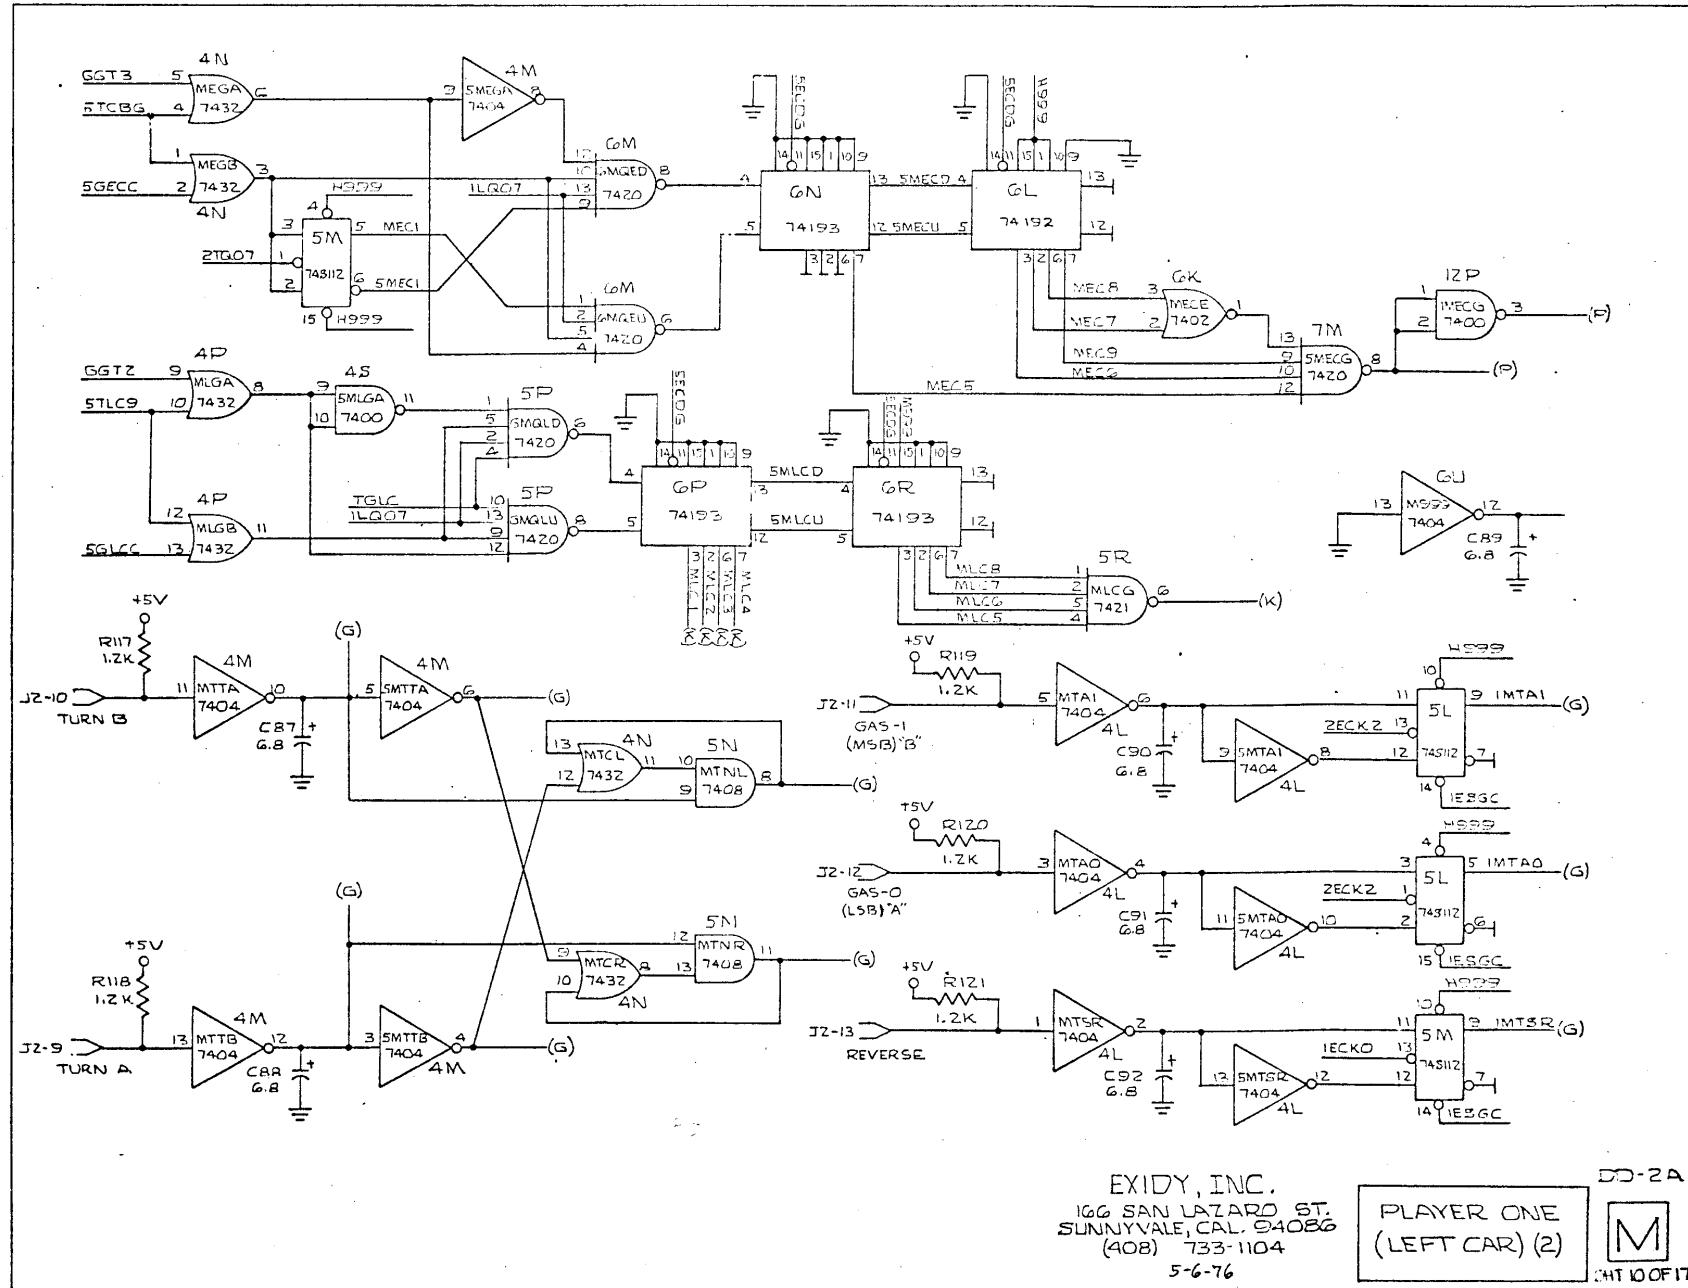

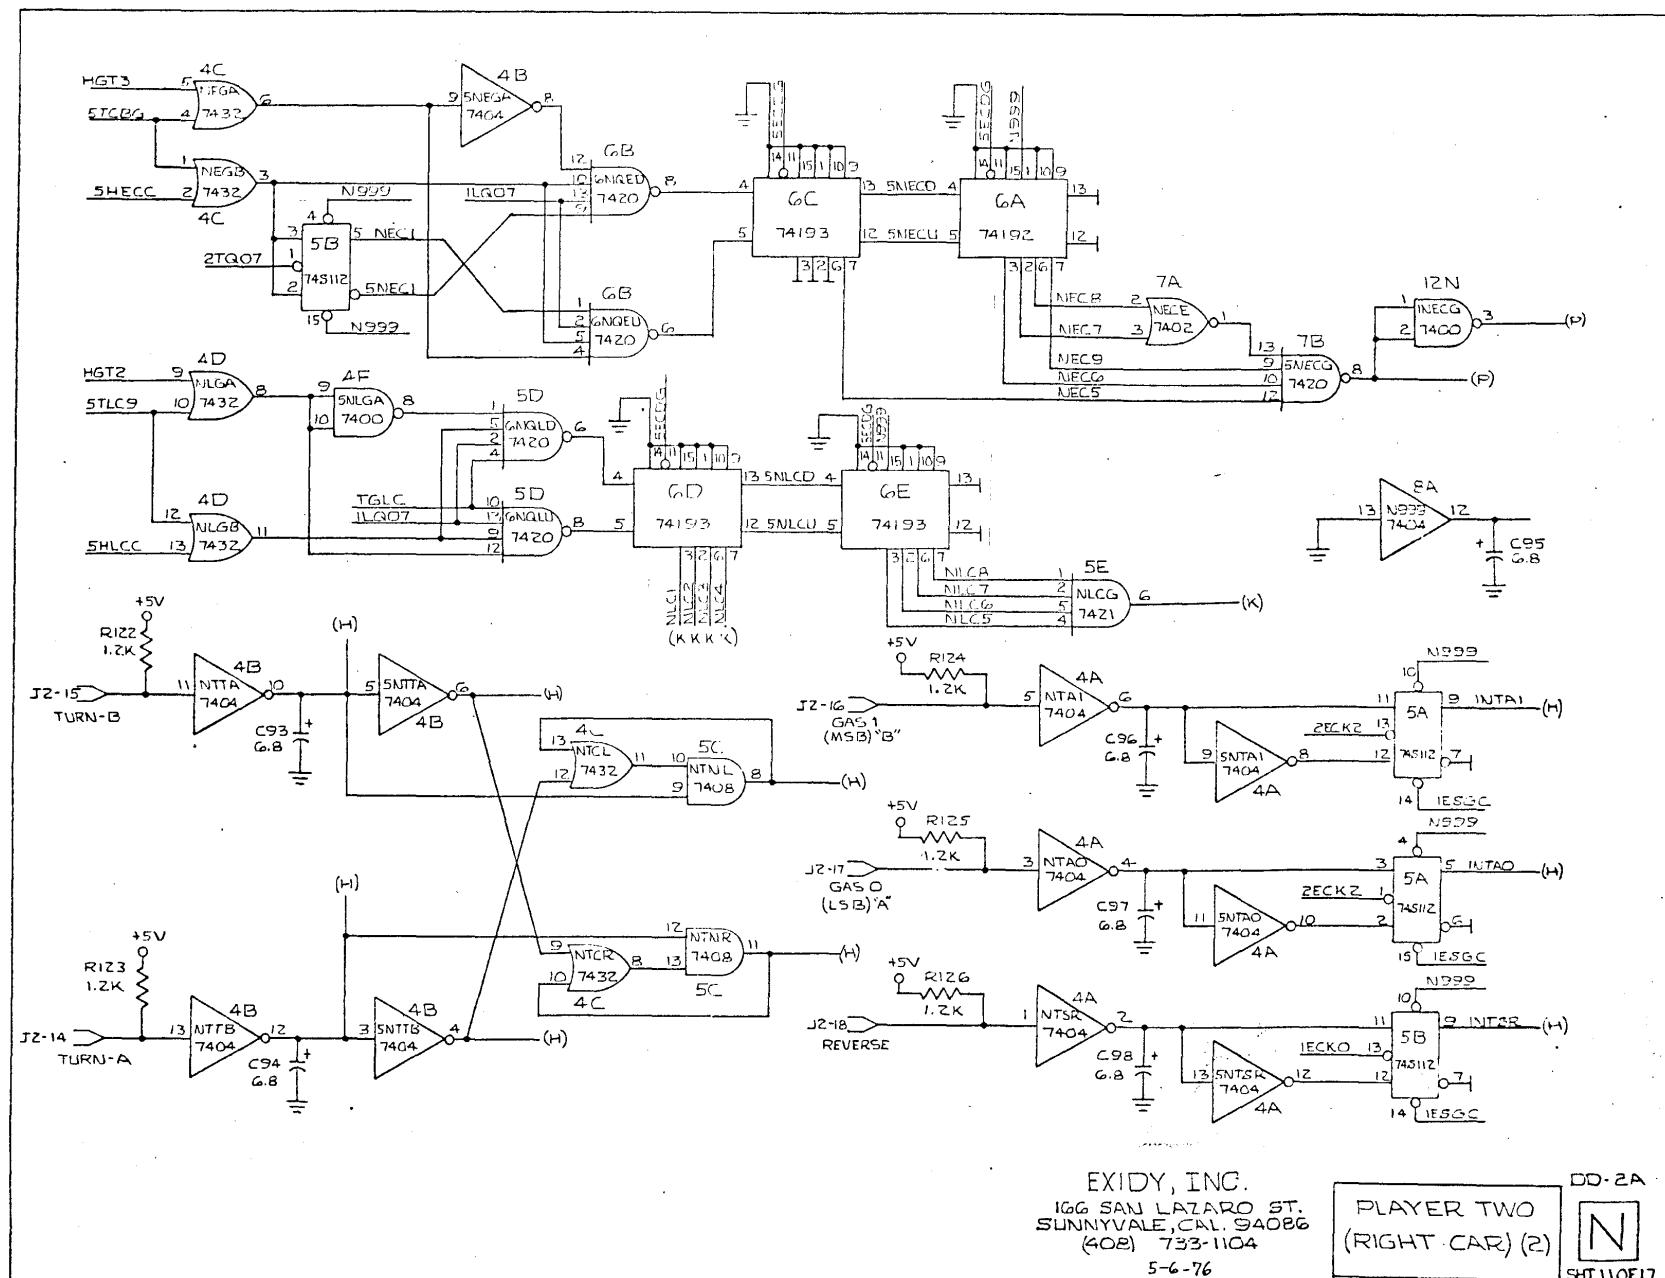

EXIDY, INC.
166 SAN LAZARO ST.
SUNNYVALE, CAL. 94086
(408) 733-1104


5-6-76


PLAYER TWO
(RIGHT CAR) (2)

DD-2A





SHT110F17

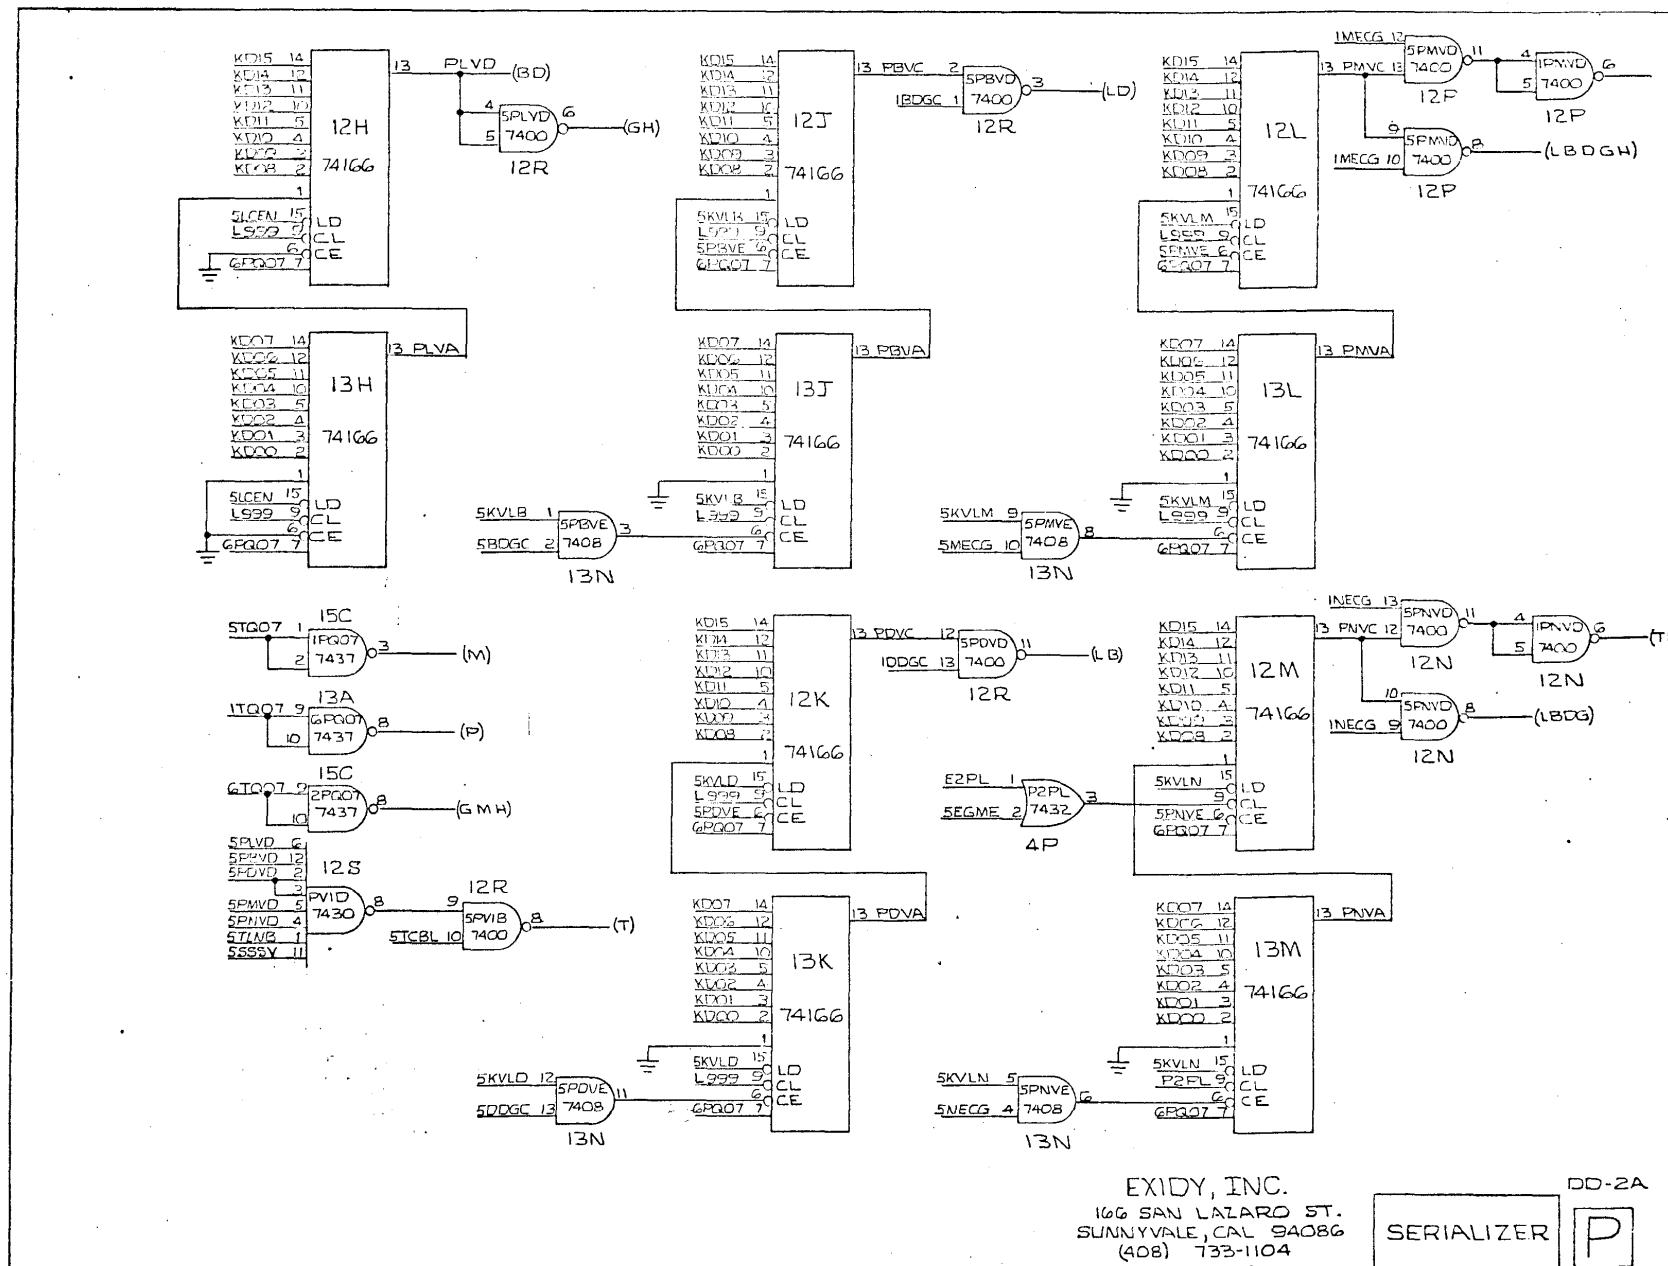

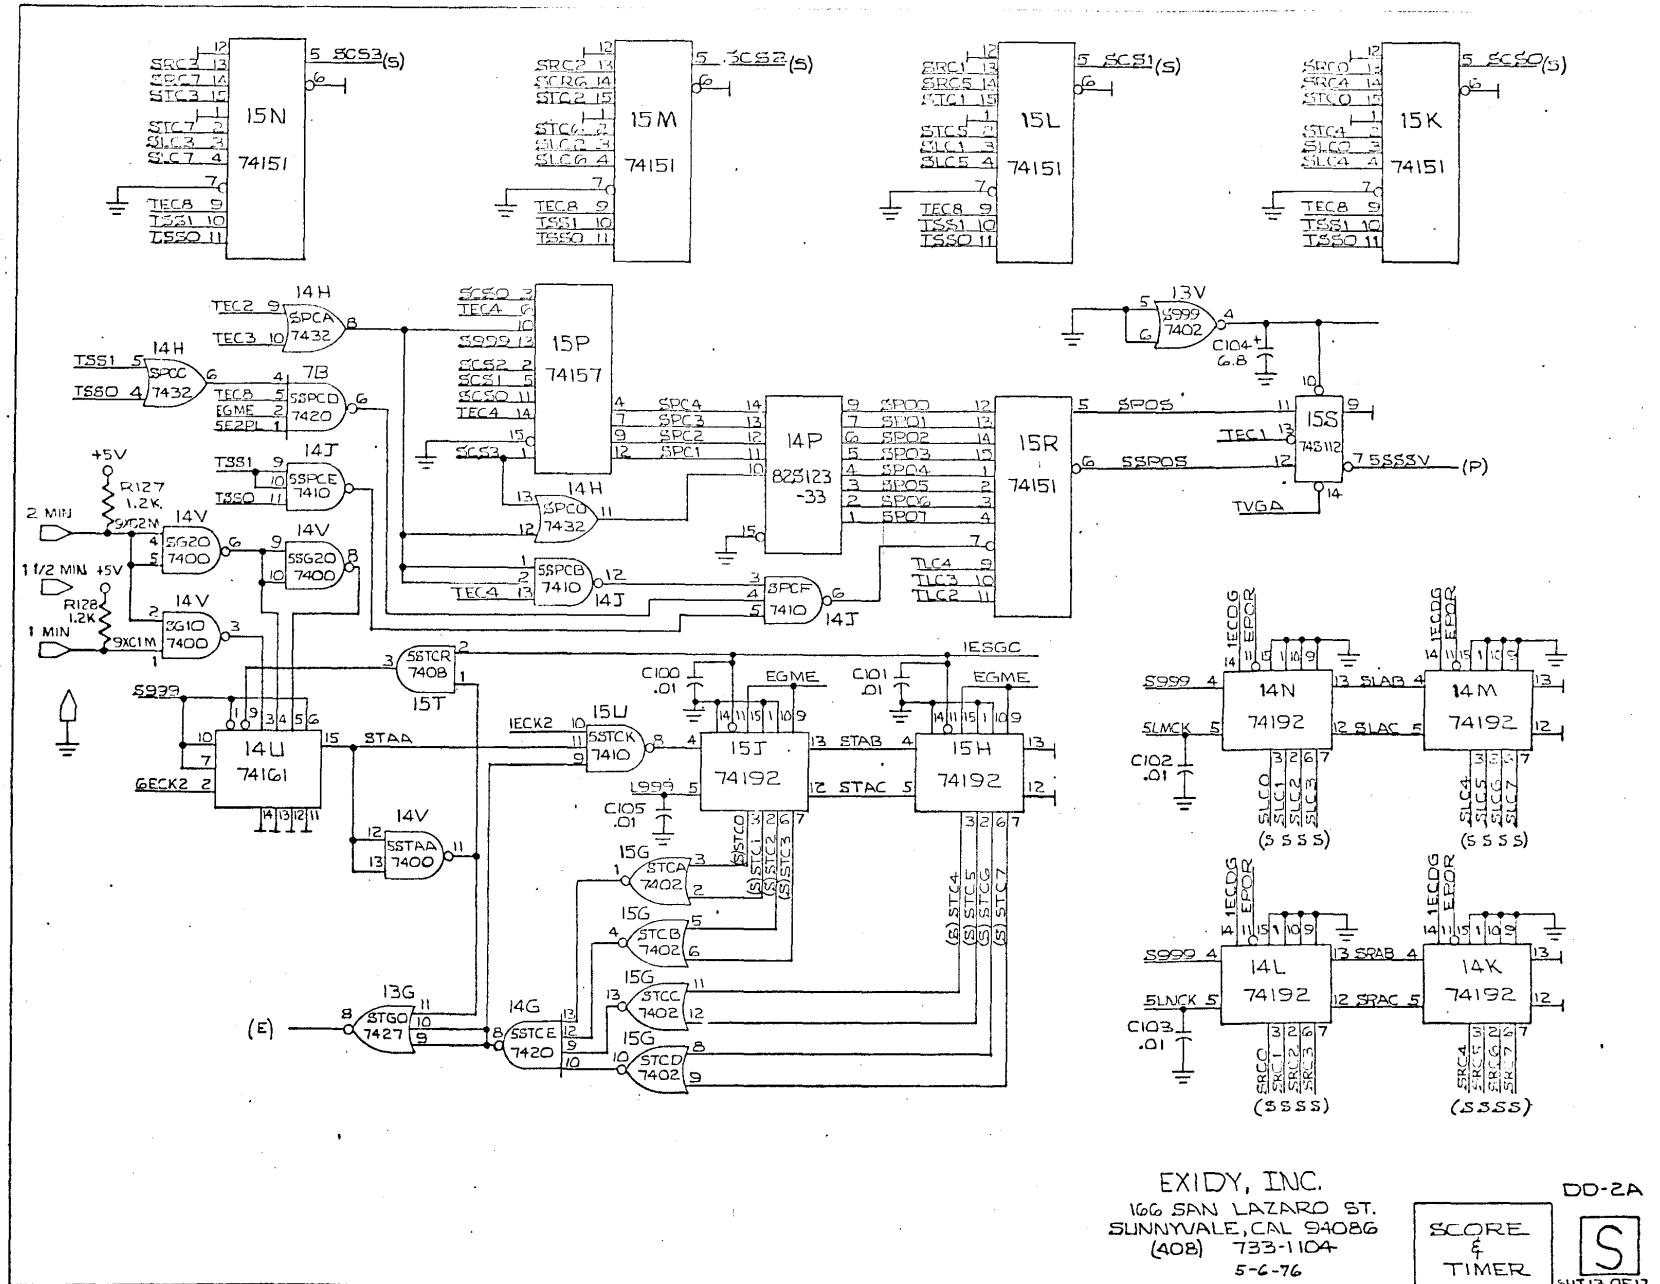

5-6-76

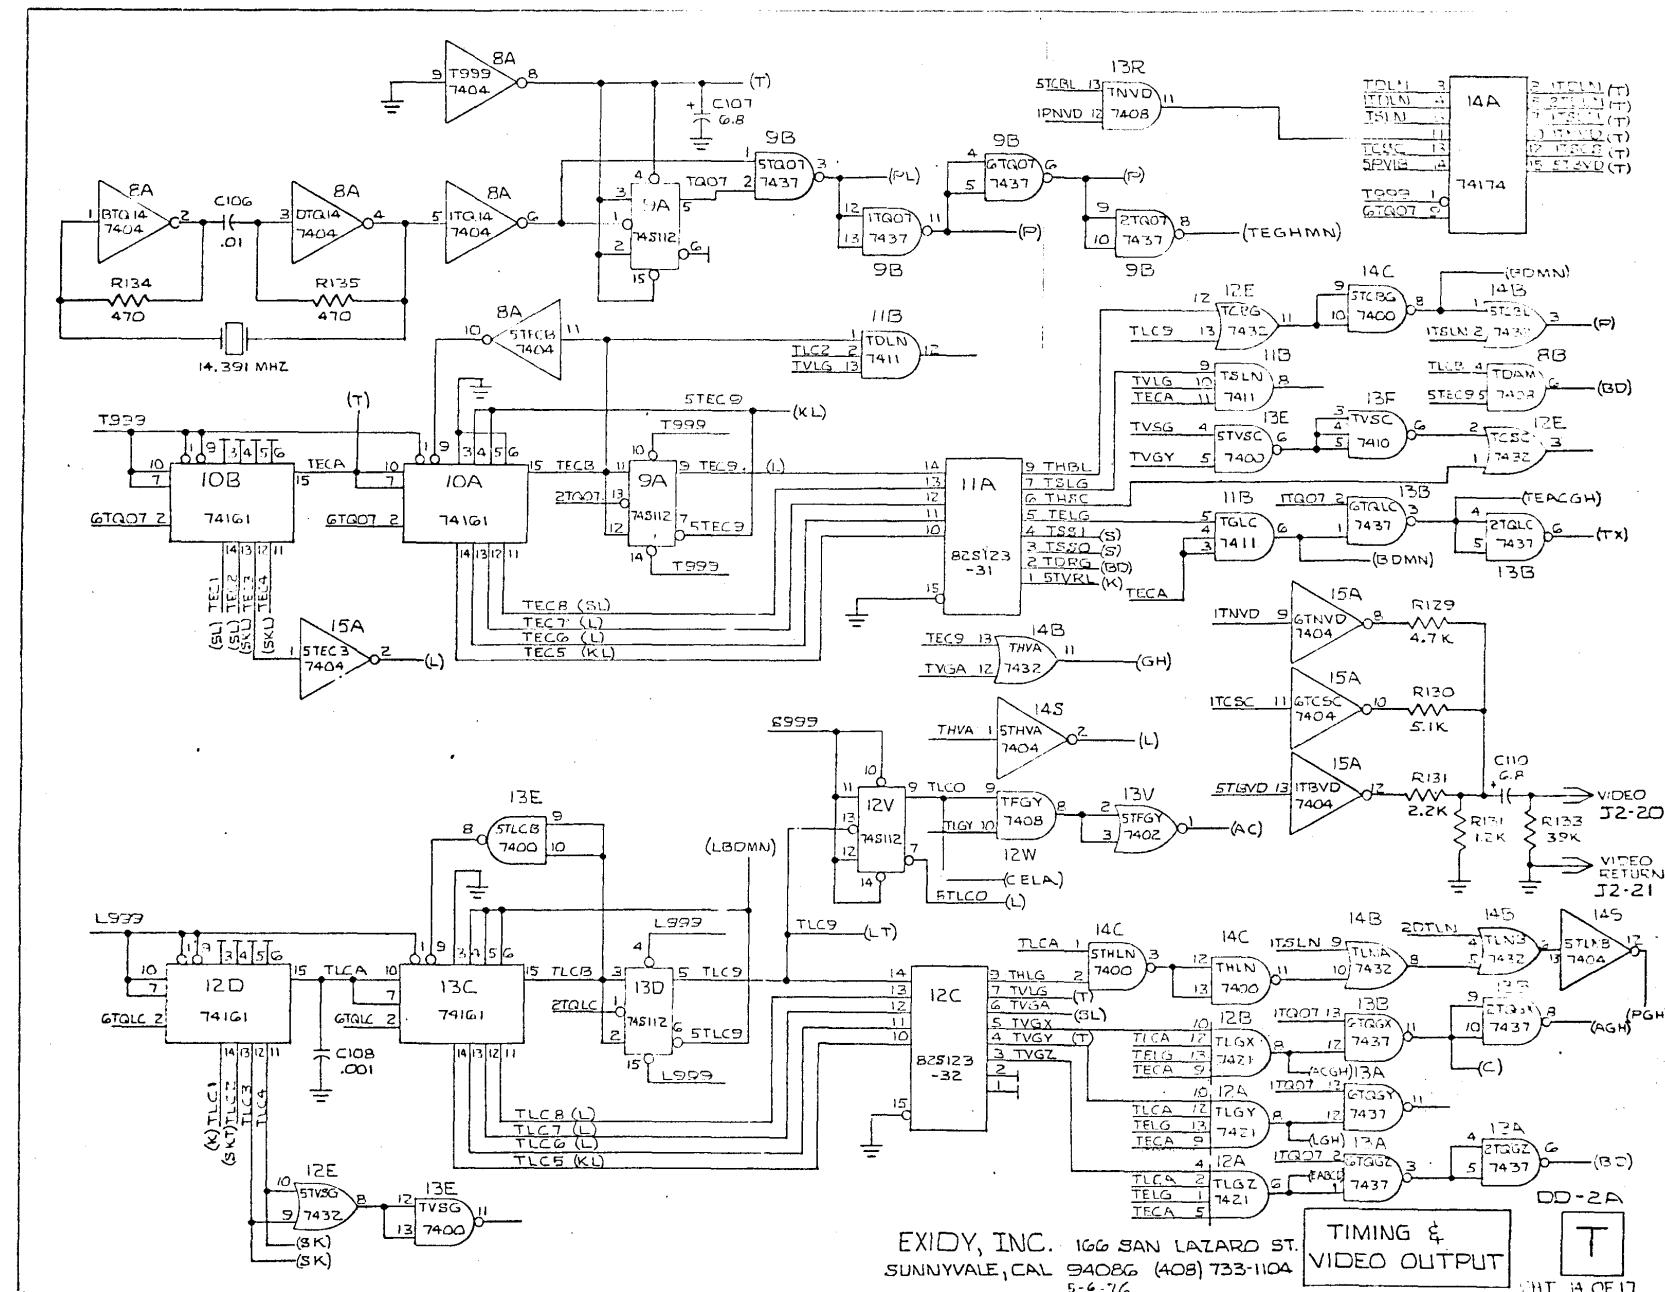

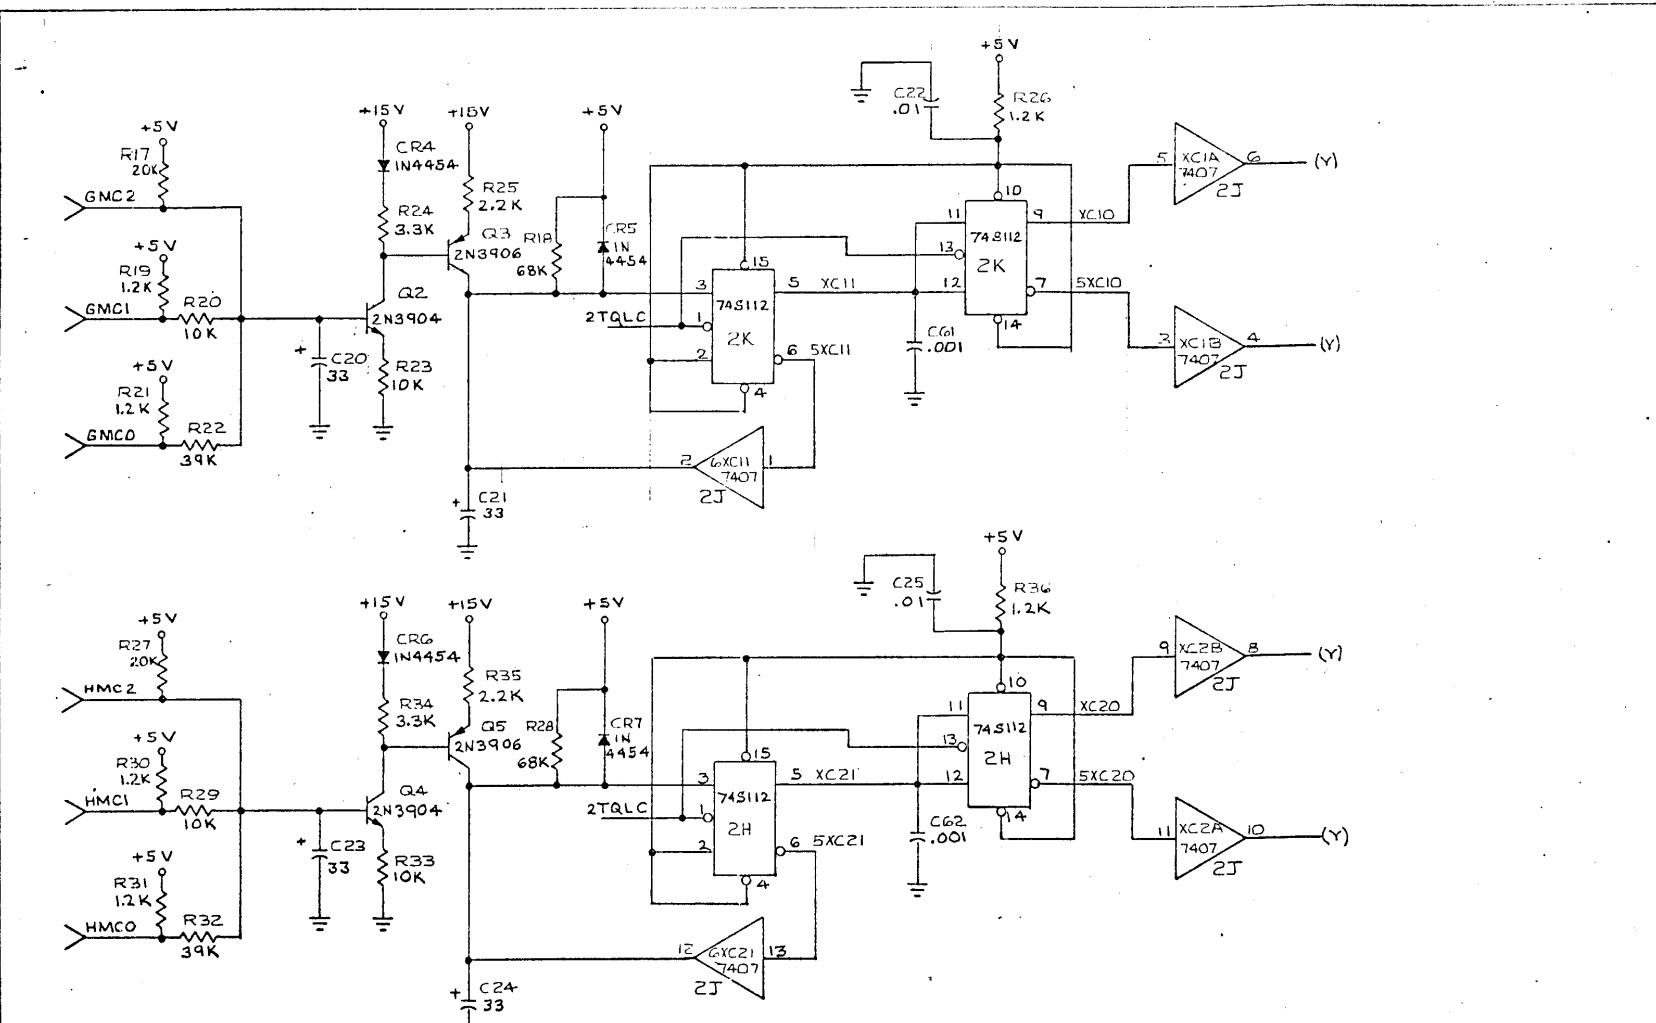

EXIDY, INC.
166 SAN LAZARO ST
SUNNYVALE, CAL. 94086
(408) 733-1104


5-6-76

DD-2A

AUDIO
MOTOR SPEED



SHT 15 OF 17

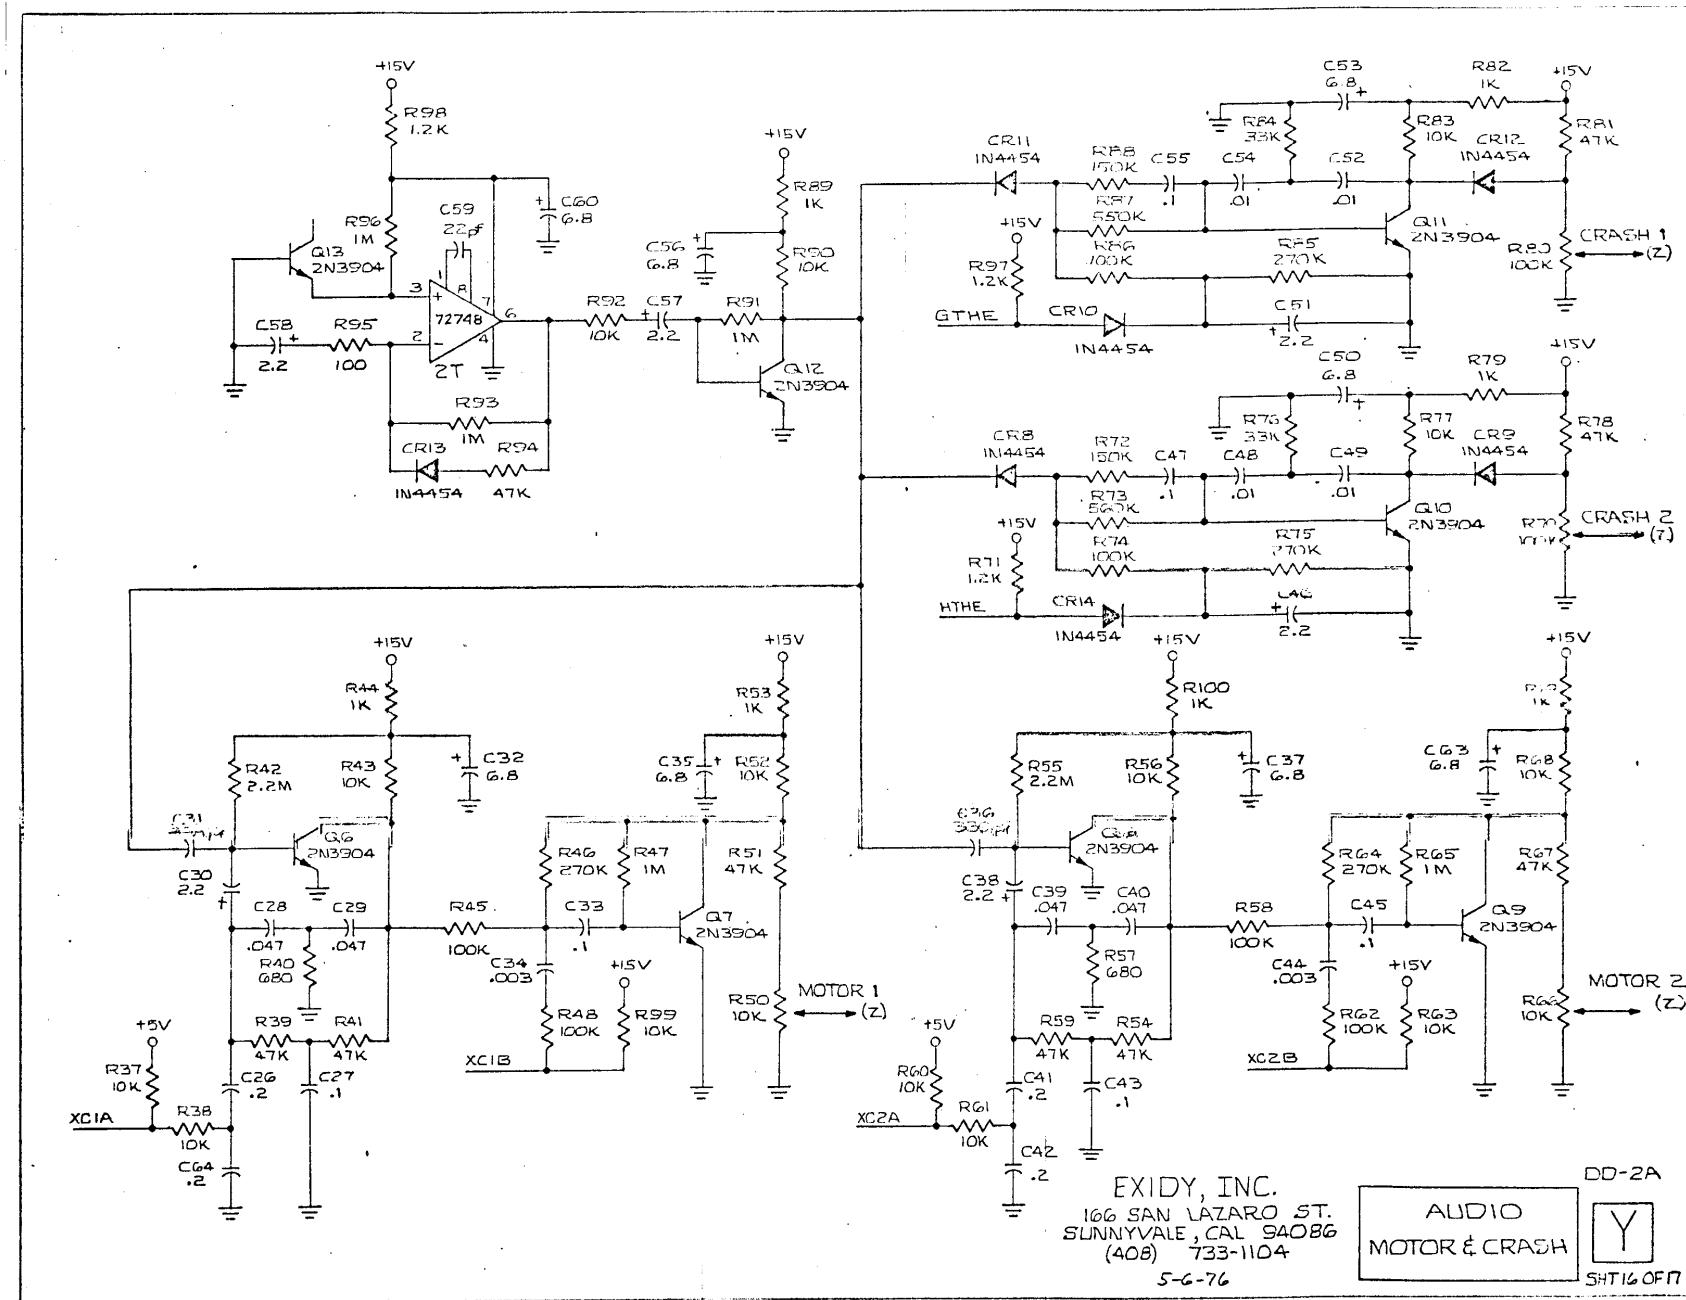

EXIDY, INC.
166 SAN LAZARO ST.
SUNNYVALE, CAL 94086
(408) 733-1104


5-6-76

AUDIO
MOTOR & CRASH



SHT16 OFP

DD-2A

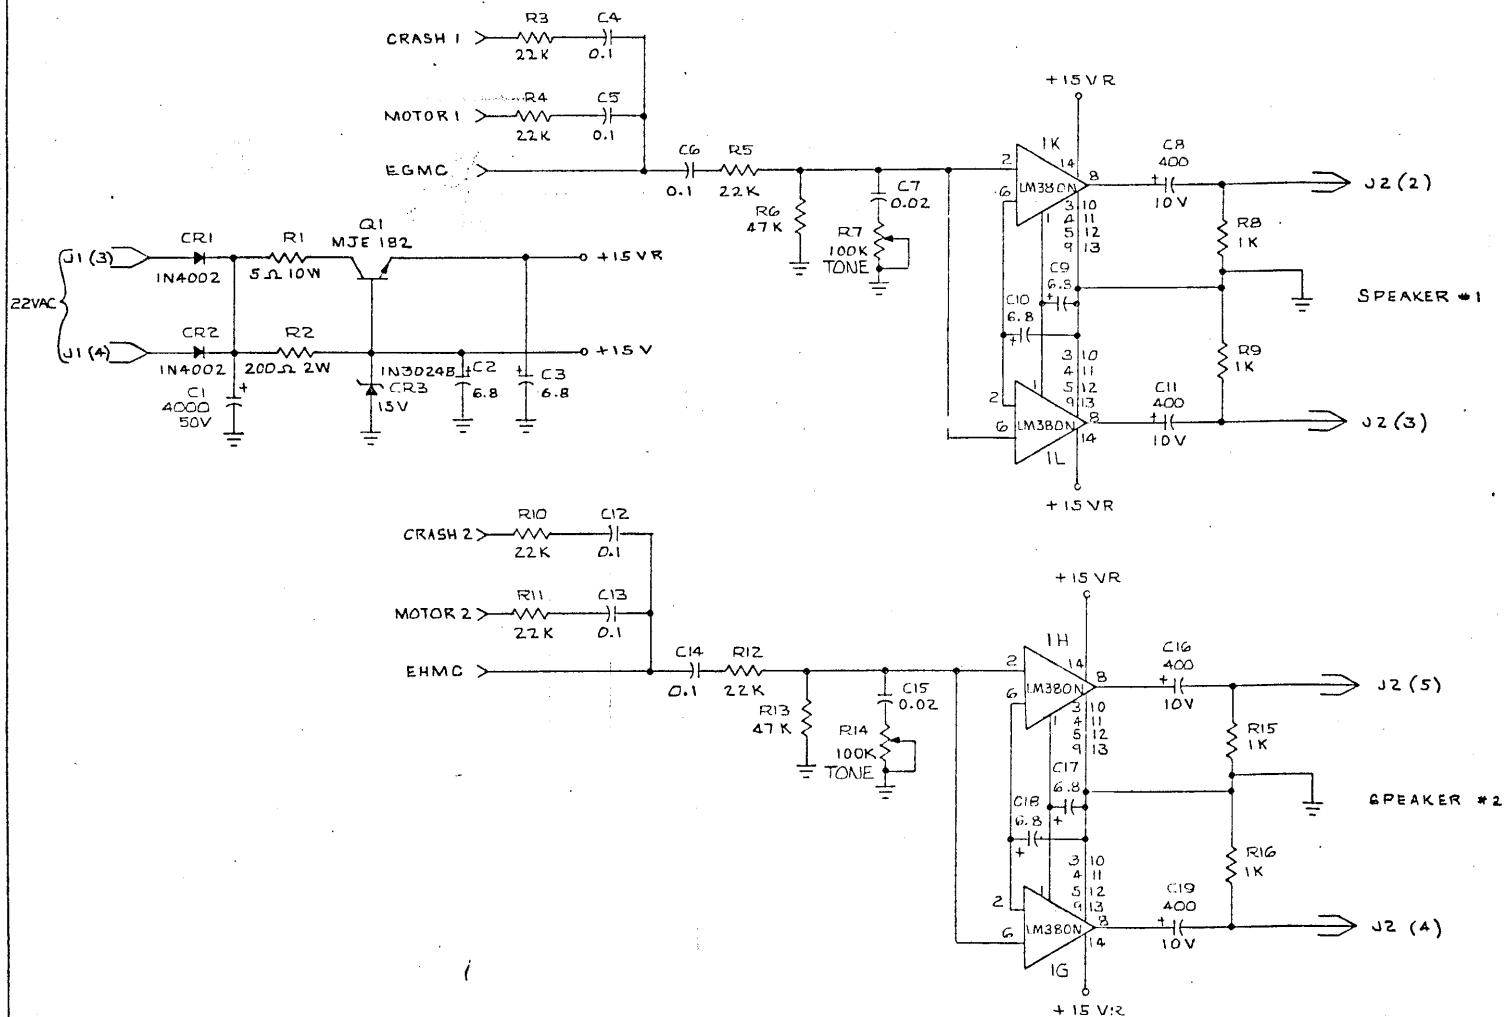

EXIDY, INC.
166 SAN LAZARO ST.
SUNNYVALE, CAL 94086
(408) 733-1104


5-6-76

DD-2A


AUDIO +15V
SUPPLY & OUTPUT
AMPS

Z

SHT 17 OF 17

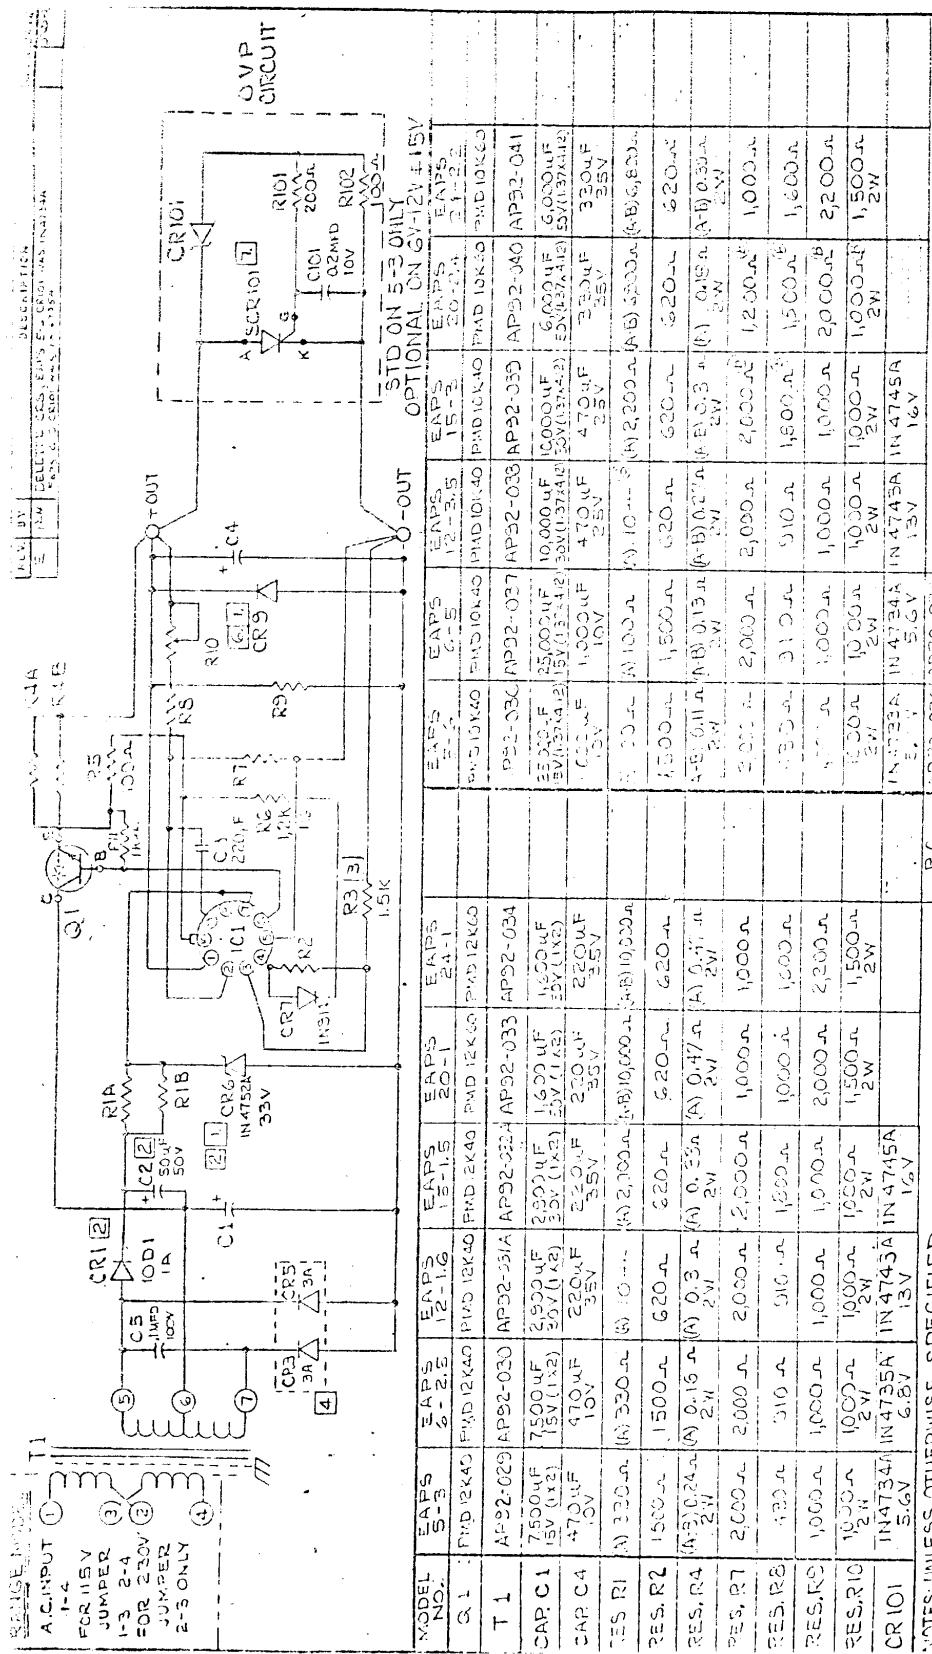

C1: ALL 560V UNITS, DELETE C2, CRI, CRG & [2] ON ALL 12V UNITS, DELETE C2, CRI, CRG & REPLACE C2 WITH JUMPER.		ADTECH POWER, INC. ANAHEIM, CALIF.	
[3] ON ALL 12V TO 24V UNITS, DELETE R3. [4] IN MODELS EXCEPT 54-15-5 USE EA 120V DIODES. [5] IN MODELS C-5, C-5 MODS, USE 2R7 WIRE (TO 3 CASE)		UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES	
[6] ALL RESISTORS ARE 1/2W, ±5%.		TOLERANCES	
FRACTIONAL	DECIMAL	FRAC.	ANGLE
$\pm \frac{1}{2}$	$\pm .125$	$\pm \frac{1}{2}$	$\pm 15^\circ$
XXX	XXXX	ENR	APR
MATERIAL:		PROPRIETARY NOTICE	
ALL PARTS OF THIS DRAWING ARE THE PROPERTY OF ADTECH POWER, INC. NO PARTS OR INFORMATION CONTAINED HEREIN MAY BE REPRODUCED, COPIED, USED, TRANSMITTED, IN WHOLE OR IN PART, IN ANY FORM, BY ANY MEANS, ELECTRONIC, MECHANICAL, PHOTOGRAPHIC, OR OTHERWISE, WITHOUT THE WRITTEN CONSENT OF THE COMPANY.		ALL PARTS OF THIS DRAWING ARE THE PROPERTY OF ADTECH POWER, INC. NO PARTS OR INFORMATION CONTAINED HEREIN MAY BE REPRODUCED, COPIED, USED, TRANSMITTED, IN WHOLE OR IN PART, IN ANY FORM, BY ANY MEANS, ELECTRONIC, MECHANICAL, PHOTOGRAPHIC, OR OTHERWISE, WITHOUT THE WRITTEN CONSENT OF THE COMPANY.	
[7] MODELS 54-15-5 THRU 54-15-15 USE SO 3050 S-3 - MODELS 54-15-16 THRU 54-15-19 USE SO 3155 S-3		FINISH:	
[8] MODELS 54-15-1 THRU 54-15-15 USE SO 3050 S-3 - MODELS 54-15-16 THRU 54-15-19 USE SO 3155 S-3		NEXT ASSY., USED ON	
[9] MODELS 54-15-1 THRU 54-15-15 USE SO 3050 S-3 - MODELS 54-15-16 THRU 54-15-19 USE SO 3155 S-3		APPLICATION	
[10] MODELS 54-15-1 THRU 54-15-15 USE SO 3050 S-3 - MODELS 54-15-16 THRU 54-15-19 USE SO 3155 S-3		SCHEMATIC EAPS	
[11] MODELS 54-15-1 THRU 54-15-15 USE SO 3050 S-3 - MODELS 54-15-16 THRU 54-15-19 USE SO 3155 S-3		SERIES-POWER SUPPLY	
[12] MODELS 54-15-1 THRU 54-15-15 USE SO 3050 S-3 - MODELS 54-15-16 THRU 54-15-19 USE SO 3155 S-3		AP30-038	
[13] MODELS 54-15-1 THRU 54-15-15 USE SO 3050 S-3 - MODELS 54-15-16 THRU 54-15-19 USE SO 3155 S-3		WEIGHT:	
[14] MODELS 54-15-1 THRU 54-15-15 USE SO 3050 S-3 - MODELS 54-15-16 THRU 54-15-19 USE SO 3155 S-3		INCHES	

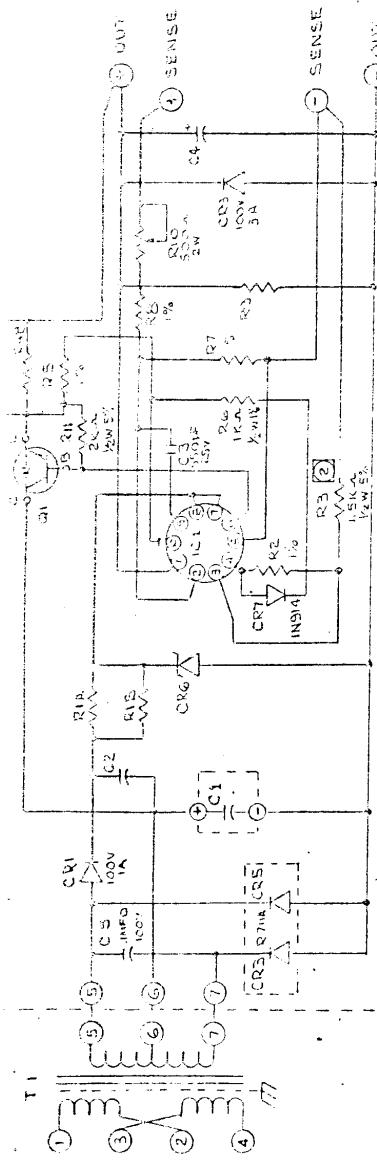

MODEL NO.	T ₁	C ₁	C ₂	CAP	CAP	CAP	R _{E5}	R _{E6}	R _{E7}	R _{E8}	R _S	R _{RES}	R _{SENSE}	ZENER
ERPS 1P32-018	PMID 56,000MFD 100V 15V (1.37A, 12)	25V	10V	NOT RECD	10A	2.1A	0.1A	0.1A	0.1A	0.1A	332.4	100.0A	100.0A	NOT RECD
ERPS 12-10	PMID 24,000MFD 50V 25V	50V	25V	100V 5%	10A	2.1A	0.1A	0.1A	0.1A	0.1A	332.4	100.0A	100.0A	NOT RECD
ERPS 12-7	PMID 24,000MFD 50V 25V	50V	25V	100V 5%	10A	2.1A	0.1A	0.1A	0.1A	0.1A	332.4	100.0A	100.0A	NOT RECD
ERPS 15-6	PMID 24,000MFD 50V 25V	50V	25V	100V 5%	10A	2.1A	0.1A	0.1A	0.1A	0.1A	332.4	100.0A	100.0A	NOT RECD
ERPS 24-4	PMID 12,000MFD 50V 25V	50V	25V	100V 5%	10A	2.1A	0.1A	0.1A	0.1A	0.1A	332.4	100.0A	100.0A	NOT RECD
ERPS 22-3	PMID 12,000MFD 50V 25V	50V	25V	100V 5%	10A	2.1A	0.1A	0.1A	0.1A	0.1A	332.4	100.0A	100.0A	NOT RECD

- NOTES
1. RESISTORS ARE $\frac{1}{2}$ W 5% EXCEPT WHERE NOTED
 2. [] DELETE R3 (1/2W 5%) UNLESS REQUIRED
 3. ON SPECIAL ORDERS.
 4. REF PC. BOARD AP20-042 (AP41-042)
 4. REF PART LIST 16-037

APTECH POWER, INC. ANAHEIM, CALIF.	
APPROVED BY	DATE
7-20-76	7-20-76
SCHEMATIC POWER SUPPLY	
EPA'S 540,127, 546, 24-4, 2B-3	
AP30-007	

PROPRIETARY NOTICE
ALL INFORMATION CONTAINED
HEREIN IS UNPUBLISHED PROPRIETARY
INFORMATION WHICH MAY BE
MADE SUBJECT TO TRADE SECRET
LAW. IT MAY NOT BE COPIED
OR DISCLOSED, IN WHOLE OR IN
PART, WITHOUT THE WRITTEN
CONSENT OF ADTECH POWER, INC.